



Balmoral 5/5+ User Manual









BALMORAL 5/5+ User Guide

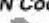 



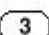 


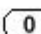 

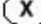 
Introduction

This alarm system uses microprocessor technology to give you a security system that is flexible to use and which is suitable for all domestic applications.

The system comprises a main control unit that houses the main printed circuit board and power supply. The main control unit has an on-board keypad for everyday use or programming. The keypad(s) provide the operator with the means to set and unset the system and to program the various operator functions described.

The control panel is provided with 9 LED's for system status and alarm information. The system is programmed via the 15 push buttons.

To Full Set — (ALL USERS)	
Press	<p><i>PIN Code or</i>  Enter your PIN code or smart key.</p> <p> the FULL SET key.</p> <p>Exit time will start. System will set on completion of the exit procedure.</p>
To Part Set 1 — (ALL USERS)	
Press	<p><i>PIN Code or</i>  Enter your PIN code or smart key.</p> <p> the PART SET 1 key.</p> <p>Part set 1 exit time will start. System will part set on completion of exit procedure.</p>
To Part Set 2 — (ALL USERS)	
Press	<p><i>PIN Code or</i>  Enter your PIN code or smart key.</p> <p> the PART SET 2 key.</p> <p>Part set 2 exit time will start. System will part set on completion of exit procedure .</p>

To Silent Full Set / Part Set 1 and 2 — (ALL USERS)	
Press	<p><i>PIN Code or</i>  Enter your PIN code or smart key.</p> <p> or  or  Select setting type. Full, Part 1 or Part 2. The panel will set the selected part if the user is authorised to do so.</p> <p>Press  the 3 (Omit) key selects silent setting</p> <p>Exit time will start. System will Set on completion of exit procedure.</p>
To Unset (No Alarm) — (NOT SET ONLY USER)	
	<p><i>PIN Code or</i>  Enter your PIN code or smart key.</p>
To Reset (After an Alarm) — (NOT SET ONLY USER)	
Press	<p><i>PIN Code or</i>  Sounders/Strobe operating. Enter your PIN code or smart key.</p> <p>LED ON FOR ZONE ACTIVATION Sounder/Strobe silenced. The display scrolls through alarms.</p> <p>Press  to reset the panel and</p> <p> to confirm.</p> <p>Press  to revert to unset.</p>

Control Panel LED's		
LED	STATUS	FUNCTION
Mains (Green)	ON OFF FLASH	Mains Present Mains Failed Running off Battery
Day (Green)	ON OFF FLASH	System may be optioned to show the day LED status when no users are logged on. Panel is ready to set. The panel is not ready to set. Setting started.
Fault (Amber)	ON FLASH OFF	Only turned on if a user is logged on. Will be on if the panel is reset when a PA, Fire, 24hr or tamper circuit is still open. Will also be on if a fault is present when setting. Programmer logged on. Zone clear, no setting problems.
Tamper (Red)	ON	System in tamper alarm condition.
Zones (Red)	ON FLASH OFF	Show the zones that are selected for setting. Show alarm zones which are not clear and which are selected for setting. Indicates the zones that are not in the setting group or zones that are omitted.

**Guardall Limited
Lochend Industrial Estate
Newbridge
Edinburgh EH28 8PL**

Part number 320435 - 01