



Windsor 500

User Manual

For Version 3 Software

Contents

Contents 2

Introduction..... 7

 System Components 7

 Programmable Features..... 7

 Event Programmer 7

 System And Area Event Log 8

 Security Lighting Controls..... 8

Areas, Circuits and Groups 9

 Common Area..... 9

 Circuits..... 9

 Bypass Circuits and Groups..... 9

 User, Area, Group and Circuit Identification 9

Authority Levels..... 9

 Keypad and Keypoint Authority 9

 User Authority 10

PIN Codes..... 11

 Assigning PIN Codes..... 11

 PIN Code Clash 11

 User Identity 11

Operator Controls and Displays..... 12

 System Keypads 12

 Keypad LEDs..... 12

 Keypoints..... 13

 Keypoint LEDs 13

 Keyswitch 13

 Electronic Keys 13

Dual PIN Operation	13
Logging on	14
Invalid PIN Code or Electronic Key	14
User Access Time	14
Engineer On Site	14
Display Formats	15
Normal 'Day' Mode.....	15
User Menus	16
Menu Restrictions.....	16
Menu Format	16
Quitting a Menu.....	16
Help Menu.....	16
Setting Methods.....	17
General.....	17
Group Setting	17
Instant Setting	17
Final Exit Route Setting.....	17
Push Button Setting	17
Timed Setting	17
Timed or Final Exit Route Setting	17
Keyswitch Setting.....	18
Communicator Set Acknowledgement	18
Home Set	18
Setting Procedure.....	19
Area or System Setting from a Keypad.....	19
Group Setting from a Keypad	19
Setting Using A Keypoint	20
Keyswitch Setting	20

Aborting The Setting Procedure.....	20
Setting with Warnings	20
Setting Faults	21
Failure to Set after Exit Time	21
Automatic Setting	21
Unsetting Methods	23
General.....	23
Entry Route Unsetting	23
Unsetting Procedure	24
Unsetting an Area or System from a Keypad.....	24
Unsetting Warnings.....	24
Group Unsetting an Area or System from a Keypad	24
Unsetting from a Keypoint	25
Unsetting from a Keyswitch.....	25
Instant Automatic Unsetting	25
Unsetting After an Alarm.....	26
Resetting After an Alarm.....	27
General.....	27
Customer Reset	27
Engineer Reset.....	27
Guardall Managed Reset.....	28
Auto Reset	28
Bank Reset	28
Viewing the Logs	29
General.....	29
Viewing/Printing The Area Log.....	29
Viewing/Printing The System Event Log	30

Testing	31
Selecting Test Functions	31
Testing The External Sounder	31
Testing The Internal Sounder	31
Testing The Strobe	32
Walk Test	32
Unset Test Functions	32
Panic Alarm Testing.....	33
24 Hr Test.....	33
Detector Test	34
Communications Test	34
Editing Text Descriptors	35
General.....	35
Selecting Text To Be Edited	35
Editing Text Characters.....	35
Text Library	37
Modifying Light Controls	38
General.....	38
Operations	38
Timed Control.....	39
Dusk Control	39
Manual Control.....	40
Testing Light Zones.....	41
Changing PIN Codes	42
General.....	42
Changing Own PIN Code	42
Changing Other User PIN Codes.....	42
Bypassing Circuits or Groups	44

ATM Bypass	45
Changing ATM PIN.....	45
Selecting the Chime Function	47
Disabling a Keypad.....	48
Changing User Authority	49
Changing the System Clock	51
Programming Electronic Keys.....	52
The Event Programmer	53
Changing Late Working Days	54
Extending the Set Time (Commercial Only)	54
Viewing/Changing Scheduled Times	54
Viewing Scheduled Holiday Periods	55
Remote Operation.....	56
Manager Isolate	57
Isolate Circuit	57
Isolate Concentrator	58
User Log Off	59
System Details	60
General.....	60
Area Descriptions	60
Bypass Group Descriptions.....	60
Circuit Descriptions.....	61
User Authorities & Descriptors.....	66
Event Log and Area Log Messages	68

Introduction

The Windsor Electronic Intruder Alarm System is designed to provide secure protection for the client's premises. The system is highly versatile permitting individual systems to be installed and programmed, to meet the particular security requirements of each installation.

Two variants of the Windsor system are available, commercial and high security.

System Components

The system comprises a main control panel, normally located out of sight in a secure area and up to eight operator LCD Keypads. An electronic Keypoint may be fitted in place of a Keypad where required. This facility provides the user with basic setting and unsetting functions using an electronic key.

The number of circuits controlled by the system can be determined (up to the maximum of 128) by installing either internal or external input/output modules ('Concentrators'). Internal concentrators may have 8 circuits and are connected to the internal serial bus in the control panel, whereas, external concentrators allow circuit expansion to a maximum of sixteen concentrators. Connection of external concentrators is via a 4-core cable to the control panel. Both internal and external concentrators provide outputs for circuit reset and testing.

Note: The maximum number of circuits can be made up of either internal or external concentrators. The power supply unit is rated at 2.0A and has deep discharge protection.

The Windsor control panel is provided with a printer port for connection of a serial printer enabling print-outs of the contents of the system event log or log events, on a real time basis as required.

An RS232 port is provided which gives the facility for interrogation and programming of the system from a personal computer. The computer can be located either locally or at a remote location and connected to the system via a modem, or via a radio network.

Programmable Features

Windsor has a wide range of programmable features, which are programmed by the engineer on installation to suit the security requirements of the particular installation. Some of the features may be reprogrammed, edited, or viewed as required by an authorised user.

Event Programmer

Windsor incorporates a configurable 'Event Programmer' designed to control the setting and unsetting times of selected areas of the system.

The 'Event Programmer' on the commercial version of the Windsor can be programmed to automatically set and/or unset selected area(s) of the system at a predetermined time each day. On the HS (High Security) version automatic unset is disabled.

The commercial event programmer has the facility to select non-working days and holidays. On these pre-selected days, the system event programmer will not operate.

In addition, the event programmer can be programmed to permit late working on pre-selected working days. If selected, this facility will extend the automatic setting time, to the pre-programmed late working time. The event programmer also has the facility to permit non-scheduled late working beyond the normal setting time or beyond the normal late working time. This facility permits an authorised user to delay automatic setting by pre-programmed time intervals up to the start of the next days schedule. Programming of the event programmer is an engineer function, however, an authorised user can temporarily change the late working day, specify holiday dates, and change schedule times if required.

System And Area Event Log

The Windsor System incorporates a 'System Event Log' capable of recording the most recent 300 events occurring throughout the system. The 'System Event Log' will record all events, i.e., user log-on log-off times and user numbers, Keypad/Keypoint point numbers, setting and unsetting times, alterations made to programmed settings, fault conditions, etc. When the 'System Event Log' is full, the oldest event will be automatically removed when the next event occurs.

An 'Area Alarm Log' is also provided for each configured area of the system, each with the capacity to record up to 10 alarm events. The 'Area Alarm Logs' will only record the sequence of events relating to alarm or abnormal conditions occurring in the log area during one set period or one unset period. Any events in an area log will automatically be cancelled when the area is reset or set, providing circuits are clear.

All log events are automatically date and time stamped and may be viewed, or printed on a system printer. When printing the 'System Event Log', the user (or engineer) can select the print-out to be filtered in order of circuit number, user number, Keypad number or date.

Security Lighting Controls

Windsor 500 Systems are provided with facilities to control up to four individual light zones. If automatic lighting control is incorporated in the system, each light zone will be switched on automatically if a Lighting Detector detects movement. Additionally, each light zone can be programmed to switch on between pre-programmed times or automatically at dusk and to switch off at a pre-programmed off time. In addition, light zones can be manually controlled.

An authorised user or engineer can modify the security lighting Controls.

Areas, Circuits and Groups

For protection purposes a premises may be divided into up to seven areas. Individual areas may be referred to as 'Area 1,2, etc.', while all areas together are referred to as the 'System'. Alternatively, text descriptors may be programmed for individual Areas. Each area can operate completely independently if required since they are provided with separate area logs, and have provision for separate sounders, reset and test options. Your alarm company engineer will have configured your system for the appropriate number of areas and to comply with your specific security requirements.

Common Area

Where more than one area is incorporated in the system, one area can be configured by the installation engineer as a 'Common Area'. A 'Common Area' will automatically set if all other areas of the system are set and will automatically unset if any one of the other areas is unset.

Circuits

A maximum of 128 alarm circuits can be monitored by the Windsor 500 System. Each circuit is allocated a unique circuit number which is used to identify the particular circuit. Your installation engineer will have programmed each circuit to respond in a certain way when the circuit is activated, when the area is set and unset. The way in which the circuit is programmed to respond will depend on the type of circuit and its location and purpose.

Bypass Circuits and Groups

An authorised user can bypass certain circuits or groups of circuits programmed as 'By-passable'.

User, Area, Group and Circuit Identification

Each user area, bypass group and circuit can be programmed with a text description, which will appear on the Keypad display, whenever the area or circuit is selected. Text descriptors are also used in log print-outs. The description of an area or circuit can be changed by an authorised user as necessary.

Authority Levels

Keypad and Keypoint Authority

Individual Keypads or Keypoints will have been programmed by the installation engineer to permit (or prohibit) setting and unsetting of a particular area or areas (or the complete system). The example below shows how these can be programmed for different functions.

- | | |
|-------------------|--|
| Keypad 1 | System Keypad permitting setting and unsetting of the complete system or individual areas. |
| Keypad 2 | Area 1 Keypad permitting setting and unsetting of Area 1 only. |
| Keypad 3 | Area 2/3 Keypad permitting setting and unsetting of either Area 2 or Area 3 |
| Keypoint 4 | Area 4 Keypoint permitting setting and unsetting of area 4 only. |

Note: A 'Manager user' has the facility to disable a selected Keypad(s). If a Keypad is programmed as Off, any key presses are ignored by the system although the display will operate as normal.

User Authority

The Windsor System can be programmed to accept up to 50 authorised users. The first three user numbers are pre-allocated as follows:

User 0 System User (Automatic functions)
 User 1 Engineer
 User 2 Manager Authority all areas

Note: User '0' is not included in the total number of users.

The remaining 49 users numbers (2 - 50) can be allocated to other users of the system.

Note: If a user number is not allocated an authority level, it is automatically assumed to have 'No Authority'.

The authority level allocated to the user number determines the user functions to which they are permitted access. In addition, the allocated authority can be restricted to specific areas of the system, (e.g., User 22 may be allocated 'Set Only' authority for area 1 and 3 only, thereby prohibiting the user from unsetting the whole system, or from setting areas 2, 4, 5, 6 or 7 if programmed).

A user with the authority of 'Manager' can perform all user functions including adding or removing a user or changing the authority of other users. However, 'Manager' authority may also be restricted to specific areas.

User Type	User Authority
None	No access permitted.
Manager	All user functions for programmed areas.
Ordinary	All user functions for programmed areas, except viewing/printing the event log, isolating a Keypad, changing user authority and changing other user PIN numbers.
Set/Unset	Set, unset, logging the engineer on and test functions for programmed areas and view/print area log(s).
Set Only	Set, logging the engineer on and test only for programmed areas.
Reset	Authority to carry out Customer Engineer Reset (if programmed) in authorised areas.
Duress	Special PIN code available to all users and used in the event of a demand to unset the system or area under duress. Use of this PIN code will unset the areas(s), but will transmit a 'silent' personal attack message to the alarm company central station. Incrementing or decrementing (optional) the first digit of the any PIN code will have the same effect.
Bank Reset	Special PIN code that performs Bank reset, view area log, bypass and perform reset (only HS Version).
ATM	Special PIN code that performs ATM bypass when logged on (HS version only).
Event Log	Can only view the event log.
Cleaner	Set and Unset only.
Unset	Unset only.
Access	A user with Access user type authority has no authority for any menu function. The only action on entry of an Access user PIN code is to trigger an output to unlock a door.

PIN Codes

Each user is identified within the system by their user number. Each user number is allocated a unique four, five or six digit PIN (Personal identity Number) which is used to identify the user and to permit user access to the various system functions according to the authority level allocated. The PIN can be entered at a Keypad or can be changed to an Electronic Key, which can then be used at an electronic Keypoint or LCD Keypad.

Assigning PIN Codes

All users can assign or change their own PIN code at any time and a 'Manager' user can change other user's PIN codes. All PIN code change events are recorded in the event log.

PIN Code Clash


If a user selects a PIN code already used, the user will be prompted by the LCD Keypad to select another PIN code. In addition, for security reasons, the other PIN code user will be prompted to change their PIN code on all subsequent occasions when entered at a Keypad, until it is actually changed.

User Identity

The identity of each user (User Number) can be programmed with a plain language name or other identity, which will appear on the Keypad display in place of the user number. This is also the case when the user changes his/her PIN code, or when the 'Manager' user changes other user's PIN code or authority. An authorised user can originate or edit text for user identity.

Operator Controls and Displays

System Keypads

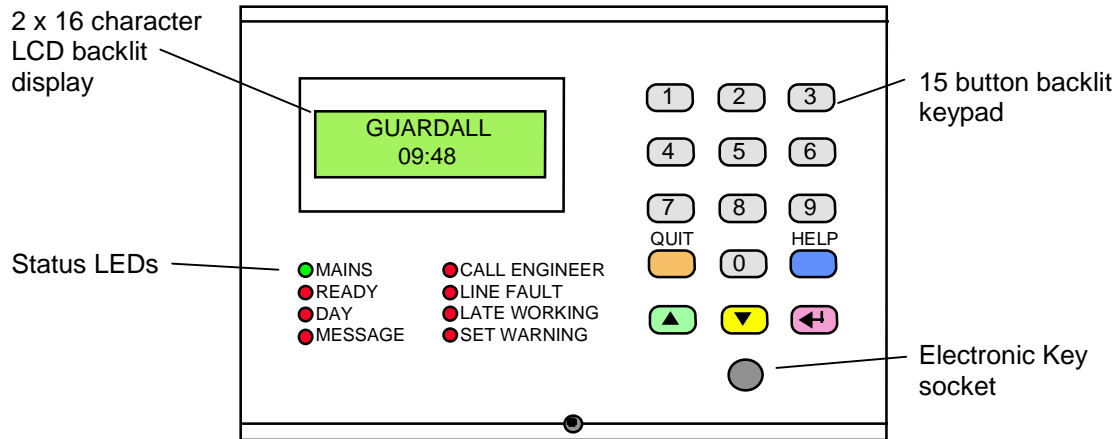


The operator Keypad unit incorporates a back-lit liquid crystal display comprising 2 lines of 16 characters (32 characters), and a backlit Keypad used to gain access to the system and to perform all authorised user functions. Keypads are fitted with an Electronic Key socket. Each Keypad unit incorporates eight LED warning lights to alert the user to the following:

Keypad LEDs

LED (Colour)	Description
Mains (Green)	Illuminates at all times, providing the mains power is present. Flashing LED indicates 'Mains Fail'. LED extinguishes if the voltage level falls below an operational threshold.
Ready (Green)	Illuminates after a user logs on if all areas authorised by the user PIN code are clear (e.g., the area alarm log is empty, areas with a set response are clear, and all area alarm circuits are clear).
Day (Red)	Illuminates after a user logs on, if all authorised areas are unset. The 'Day' LED will flash during setting.
Message (Red)	The 'Message' LED is illuminated if an entry is contained in the area alarm log for the Keypad authorised area(s) or the system log.
Call Engineer (Red)	Illuminates if the system has been programmed for 'Engineer Reset' and a reset is required by an authorised engineer.
Line Fault (Red)	Illuminates after user logs on if a telephone line fault exists when the system is unset.
Set Warning (Red)	Illuminated when a set warning condition exists (described later). A warning tone is also emitted from the Keypad.
Late Working (Red)	Illuminates when 'Late Working' is selected for the current day.

Keypoints

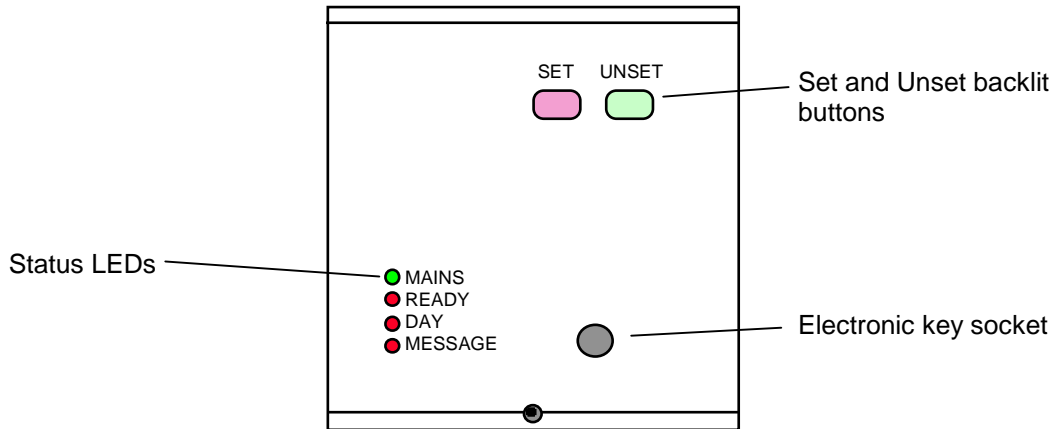

Keypoints can be fitted instead of any of the 8 (maximum) Keypads. Each Keypoint can be programmed to permit setting/unsetting of only one selected area or the complete system.

Keypoint LEDs

When a stand-alone Keypoint is fitted, a series of 'Status' LEDs are also provided to inform the operator of the system status at any one time. These are identical to the LED's on the LCD Keypad.

Keyswitch

As an alternative method of setting and unsetting, a simple 'On' 'Off' Keyswitch may be fitted to the system.

Electronic Keys

Up to 49 Electronic Keys can be used with Windsor. Each key is used instead of a user PIN code. Electronic Keys replace a user's PIN code and have the same authority.

Note: Only one Electronic Key per user is allowed.

Dual PIN Operation

Where a higher level of security is required a Keypad or Keypoint may have been programmed to require either two PIN codes, two Electronic Keys, or an Electronic Key and PIN code to be entered within a 2-minute time window, before the user is logged on to the system.

Logging on

A user logs on to the system by entering a user PIN (4 to 6 digit code) at a Keypad then presses 'Enter'. Alternatively the user can log on by inserting a valid electronic key at the Keypad or Keypoint. The system will check that the entered PIN code or Electronic Key is valid before permitting access to the system user functions.

Company Name
Enter-****

When the user enters a PIN code at a Keypad, the display will not show the user PIN code. Instead, an asterisk will be shown for each digit entered.

Invalid PIN Code or Electronic Key

Company Name
Incorrect PIN

If an incorrect PIN code or Electronic Key is used at a Keypad, the LCD will show an 'Incorrect PIN' display for 4 seconds or until another key is pressed.

Out Of Service

If more than the programmable limit of attempts are made to enter a valid PIN code, the Keypad will be locked out and the display will show 'Out of Service' for a period of 5 minutes. Any attempt to enter a PIN code or Electronic Key during the locked out period will extend the period by another 5 minutes.

If an invalid Electronic Key is used at a Keypoint, the 'Ready' LED will be illuminated and the set and unset buttons on the Keypoint will simply not function.

User Access Time

Important Note: When a user logs on to the system a selection must be made from the user menu within two minutes of log on, otherwise they will be automatically logged off.

Engineer On Site

Out Of Service

When an engineer logs on to the system, all system Keypads will be inoperable and the display will show 'Out of Service'

Display Formats

Normal 'Day' Mode

When a Windsor is first powered up the display will default to displaying the date and time. The displayed format on each Keypad can be modified by any user by pressing the ▲ button to change the top line and the ▼ to change the bottom line.

Mon 02 Jan 95
00:00

The top line shows to-days date.



W72200 V3.02
00:00

The top line shows the software part number and revision level.



Company-Name
00:00

The top line shows the programmed company name.



Set : 14
00:00

'Set Display' will only be shown if programmed for the Keypad by the installation engineer. In the example shown areas 1 and 4 are currently set.



Mon 02 Jan 95
00:00

The display is now back to the first format.



Mon 02 Jan 95
Enter-

The 'Enter' prompt will be displayed, even if the display is defaulted to show the time, when a user is entering a PIN code.

The LCD backlighting will be turned on during the entry time, during PIN entry and while a user is logged on. It may also be turned on using the HELP button and turned off using the QUIT button at any time.

User Menus

Menu Restrictions

The display which appears on the Keypad LCD when a user logs on to the system will depend on the authority allocated to the user, which Keypad is used, the set condition of the area, any other Keypad activity, and any time restrictions governed by the event programmer.

Menu Format

**0=Reset 2=Set
5=Eng 6=Text.....**

Where a choice of functions is offered to the user, they are shown on the display preceded by a one digit number. To select a function the user must enter the appropriate number at the Keypad. Where the complete user choice cannot be shown on the display, a series of dots will appear after the last choice to indicate that a further selection is available.



Pressing the ▼ button will display other choices available to the user.

**7=Light 8=PIN
↵=Next Page**

Where the choice of functions exceeds ten, the user can select the 'Next Page' of functions by pressing the ↵ button when shown.

Quitting a Menu

**0=Reset 2=Set
5=Eng 6=Text.....**

When a user has selected a function from page 1 or 2 of the 'User Options Menu', and wishes to leave the selection, pressing 'Quit' will return the display to the previous menu.



↵=Confirm LogOff

Pressing 'Quit' when the 'User Options Menu' is displayed will display the option to quit from the 'User Options Menu' completely. Press '↵' to confirm log off, or 'Quit' to return to the 'User Option Menu'



**Company-Name
Enter-**

Help Menu

**User-04
J. Smith -Off**

When the system requires the user to input information (e.g. 'Authority'), pressing the 'Help' button will display the limits, options, or values available.



**0=Off 1=Manager
2=Ordinary.....-**

Again, where more options are available than can be displayed, the last option is followed by dots to indicate that options are available. Press the ▼ button to display other options. Pressing the 'Help' button at any other time will display 'Not Available - Key Not Used'.

Setting Methods

General

An authorised user can set the complete system or partly set the system by area from a Keypad or Keypoint according to the user authority level, and the area authority allocated to the particular Keypad/Keypoint

Alternatively, where the system event programmer has been programmed to set an area of the system at a predetermined time, the area will set automatically. All settings, or attempts to set the system or an area of the system, are recorded in the system event log. Where the event programmer is used to set an area, it will always set instantly at the pre-determined time. However, where setting is initiated from a Keypad, Keypoint, the method of finally setting the system or area, will depend on the final setting method programmed by the installation engineer for the particular Keypad/ Keypoint.

Group Setting

Where a system has been programmed for Group Setting, the set menu will display "Group" as one of the available areas. Selection of Group Setting will display the current area set/unset status (set areas on the top line and unset ones on the bottom line of the display). To select more areas for setting, press the numeric key for the area/s you wish to set. New areas for setting will appear flashing on the top line. Press to set. All newly selected areas will set according to the setting method programmed for the entire system.

Instant Setting

Where a Keypad (or Keypoint) has been programmed to 'Instantly Set' an area it will immediately set on demand.

Final Exit Route Setting

Where the Keypad or Keypoint has been programmed for Route Setting of 'Final Exit' setting, the area(s) will finally set by closing the door designated as the 'Entry/Exit'. The exit tone will operate until the 'Entry/Exit' is closed. The user must leave the area by the prescribed 'Exit Route'. If a user deviates from the prescribed 'Exit Route' during exit, the exit tone will change to a pulsing tone while the 'Non-Exit Route Circuit' is open or activated.

Push Button Setting

If the Keypad or Keypoint is programmed for 'Push Button' setting, the system or area will finally set when a push button, located outside the area, is activated. The exit tone will operate until the exit push button is pressed. The user must leave the area by the prescribed 'Exit Route'. If a user deviates from the prescribed 'Exit Route' during exit, the exit tone will change to a pulsing tone while the 'Non Exit Route Circuit' is open or activated.

Timed Setting

If an area or the system is programmed for 'Timed Setting' from a particular Keypad/Keypoint, the area(s) will set on expiry of a pre-programmed 'Exit Time'. The user must leave the area by the prescribed 'Exit Route'. If a user deviates from the prescribed 'Exit Route' during exit, the exit tone will change to a pulsing tone while the 'Non Exit Route Circuit' is open or activated.

Timed or Final Exit Route Setting

If programmed for 'EnEx or Timed' setting from a particular Route Setting Keypad/Keypoint, setting is completed either by closing the 'Entry/Exit', or on expiry of the 'Exit Time', whichever is the sooner. The exit

tone will operate until the 'Entry/Exit' is closed or the 'Exit Time' has expired. The user must leave the area by the prescribed 'Exit Route'. If a user deviates from the prescribed 'Exit Route' during exit, the exit tone will change to a pulsing tone while the 'Non Exit Route Circuit' is open or activated.

Keyswitch Setting

A Keyswitch may be fitted and used to set and unset an area of the system. The Keyswitch (if fitted) is used to set and unset the area only and does not permit the user access to any other functions. When an area is set (or unset) using a Keyswitch, the event is recorded in the event log as 'Key Set Req'. User number '0' is attributed to this operation because the action is performed by the system itself.

Communicator Set Acknowledgement

Your system may incorporate 'Return Path Signalling', whereby an Acknowledgement signal will be sent from the central station to acknowledge that they have received the 'Set' signal. This 'Acknowledge' signal may be used to activate a bleeper, the external strobe light or another signalling device for a short period. The user should ensure that the 'Return Path Signal' has been received after the system has set.

(Note: Only available if more than 2 areas are configured and the option has been enabled by the engineer)

Home Set

If the system has been Part Set and the set area activates, the bell delay and communicator will be cancelled giving a "bell only" system.

Setting Procedure

Area or System Setting from a Keypad

The combination of user authority and Keypad area authority may provide a choice of areas which can be set from a particular Keypad or a choice of setting the whole system.

2=Set 4=Test
5=Eng 6=Text.....

2

0=System
1=Workshop...

▼

2=Office Area
8=Group

1

Setting Workshop

Setting Workshop
Seconds Left-005

Workshop
Set

1. Enter your PIN code and press 'Enter', or insert an Electronic Key.
2. The available user options are shown.
3. Press '2' to select the area set options.
4. The display will show the available setting options, if applicable. If all options cannot be shown on the display, dots will appear after the last option to indicate that a further choice is available.
Press ▼ to view the remaining choice and make a selection.
5. Press the key corresponding to the system or area to be 'Set'
6. The setting procedure will begin.
7. If programmed for 'Timed' setting, the display will show the number of seconds left before the area (or system) will set. The Keypad sounder may emit the exit tone during the exit period. The 'Day' LED will also flash during the exit time and will remain 'On' if the system is only part set.
8. If 'Instant Setting' has been programmed for the area (or system), it will set immediately. The display may continue to offer other authorised options, if applicable, (including setting other areas if the system is only part set). The 'Ready' and 'Day' LED will be extinguished.

If the control panel has been programmed for log off after set then the user will be automatically 'logged off' when the area(s) sets.

Group Setting from a Keypad

The combination of user authority and Keypad area authority may provide a choice of areas which can be set from a particular Keypad or a choice of setting the whole system.

2=Set 4=Test
5=Eng 6=Text.....

2

0=System
1=Workshop

8

Set:1
Unset:2

1. Enter your PIN code and press 'Enter', or insert an Electronic Key.
2. The available user options are shown.
3. Press '2' to select the area set options.
4. The display will show the available setting options, if applicable. If all options cannot be shown on the display, dots will appear after the last option to indicate that a further choice is available. Press ▼ to view the remaining choice and make a selection.
5. If group setting is configured the when set is selected, "Group" will be option 8
6. Select group and the display will show the current set/unset status.

2

7. Select the area(s) to be set and these will now be displayed in the set status.

Set:1+2

↵

8. Select ↵ and the group set will take place. After the group has been set, the menu will be displayed or the user will be logged off

Group Set

Setting Using A Keypoint

When an Electronic Key is inserted in a Keypoint the user authority and the authority to set the area(s) (or system) at the particular Keypoint are checked. If setting is permitted, the 'Ready' LED will be illuminated.

1. Press the 'Set' button.
2. The setting procedure will begin.

Note: If programmed for 'Timed Set: the 'Day' LED will flash and the Keypoint sounder may emit a continuous warning tone during the exit time.

Keyswitch Setting

As an alternative to setting and unsetting from a Keypad/Keypoint, your system may be fitted with an optional Keyswitch which permits setting and unsetting of an area by turning the Keyswitch.

To set the area(s), turn the Keyswitch to the 'Set' position. The Area will set instantly and silently.

Aborting The Setting Procedure

Setting Workshop Stopped

Where an area or system setting procedure incorporates an 'Exit Time', the setting procedure can be aborted at any time during the 'Exit Time' by pressing 'Quit' at an area Keypad, re-inserting an Electronic Key at an area electronic Keypoint, or turning a Keyswitch to the 'Off' position. The area Keypad(s) will show that the setting has been stopped. The event will be recorded in the system event log.

Setting with Warnings

The Windsor System will automatically display any condition of which the user should be aware of before setting the system. These conditions will fall under the heading of 'Setting Warnings' and do not prohibit the user from setting the system in the normal way. The user however may wish to change a condition before setting the area(s) or system, where appropriate.

Set Warning
↵ = Report

If a warning condition exists when the user selects an area (or system) to set, the Keypad display will immediately show 'Set Warning - ↵ = Report'.

↵

Loading Door Isolated

Press the ↵ button to display the setting warning(s). If more than one setting warning is present, the display will automatically scroll through the list of warnings
The display will offer the option to set the area with the displayed condition existing.

Workshop
↵ = Set

Press 'Enter' to proceed with setting or press 'Quit' to return to the 'User Options Menu'.



Workshop Set

Possible 'Setting Warnings' are as follows:

1. Circuits Bypassed
2. Circuits On Soak
3. Circuits isolated
4. Line Fault (appears as 'Setting Warning' only when setting with telephone line fault is programmed as prohibited).

Setting Faults

The Windsor System will not permit setting with faults or with any circuit open or activated, with the exception of exit route circuits or circuits which have been bypassed or isolated.

Cannot Set ↓=Report

If the display shows 'Cannot Set -↓=Report' when an authorised user selects a displayed setting option, a system problem exists which is preventing the setting being initiated from the Keypad. An audible warning will also be emitted from the area Keypad.



Press ↓ to display the fault report, (e.g. 'Tamper').

Tamper Rear Door

If more than one warning is present, the display will automatically scroll through the list of warnings.

Tel:xxxxxxxxxx Ref:xxxxxx

If a fault exists which requires the attendance of an engineer, the 'Call Engineer' LED will be illuminated and the display will show the 'Service Telephone Number' and 'Site Number' after the last fault has been displayed. Call engineer or press 'Quit' to return to the 'User Options Menu' and take any corrective action necessary.

Failure to Set after Exit Time

If the selected area (or system) fails to set at the end of the exit period, the exit tone will change to warn the user that the system has not set. On return to the area Keypad, after logging on, the display will show 'Cannot Set' then scroll through the list of fault condition(s)

Automatic Setting

The Windsor System incorporates an 'Event Programmer' which may have been programmed by the installation engineer to automatically set a pre-selected area or areas of the system according to a pre-programmed schedule. The schedule will have been selected to take into account the normal closing time and scheduled late working days together with all non-working days and holidays.

Windsor can be programmed to automatically set and/or unset in the following manner;

1. Programmable up to 10 minutes minimum before the scheduled 'Set' time, all Keypads/ Keypoints in the area will emit a pulsed bleeping tone to indicate that the area is about to automatically set. The 'Set Warning' LED on the Keypad will also be flashing.
2. If no user action is taken, the area will set at the pre-programmed setting time (if 'Auto Set' is programmed).
3. If late working is scheduled for a particular day, the automatic setting time will be extended to the pre-

programmed 'Late Working' time. The 'Late Working' LED will be illuminated until the area is manually or automatically set.

4. If an extension facility is programmed, the user may extend the automatic setting time by the pre-programmed 'Extension Time' beyond the normal (or late working) time, by entering an authorised PIN code or key at an area Keypad (or an authorised electronic key at an area Keypoint) during the warning period. The 'Extension time' may be requested repeatedly up to midnight of the current day.

Note 1: A 'Manager' user can select scheduled 'Late Working' at any time during the day up to the scheduled normal setting time.

Note 2: A Manager user is required to view the event programmer settings and to modify the 'Late Working' days.

Note 3: If faults exist during setting and the system is programmed to permit automatic setting with faults the system will set with the faulty circuits temporarily bypassed. If not programmed to permit setting with faults, the system will not set and an 'Auto Set Fail' signal is automatically transmitted to the communication centre via the system communicator.

Note 4: An authorised user may set the area(s) before the set time, working late time or during any "Extension" duration by entering an authorised user code and setting the area(s) in the normal way.

Unsetting Methods

General

Unsetting of an area or system can only be requested by a user with authority to unset the particular area (or system) and from a Keypad or Keypoint programmed to permit unsetting of the area (or system)

Unsetting can be initiated by a user request on a Keypad or Keypoint, by opening an entry circuit, by turning a Keyswitch to the 'Off' position, or automatically if the event programmer is configured for 'Auto Unsetting'.

Entry Route Unsetting

If an area (or system) incorporates an entry route in the unsetting procedure, opening a 'final' entry door to the area will automatically start a pre-programmed entry timer and cause the area sounder to emit a continuous entry tone. The user must proceed directly to the area (or system) Keypad/Keypoint or Keyswitch via a pre-determined entry route and unset the area (or system) as described. If the area (or system) is not unset before the entry time has expired the sounder(s) will change to an intermittent pulsing tone for a warning period (an additional 50% of the programmed entry time). This is to warn the user that an alarm condition will occur if the area (or system) is not unset by the time that the warning period has expired. If the system (or area) is not unset by the time that the total 'Entry Time' and 'Warning Time' has expired, an alarm condition will be initiated.

If, on entry, a user deviates from the prescribed entry route into an armed area during the entry time, the entry time is immediately cancelled and replaced with a fixed pre-warning period of 45 seconds. If the user enters an armed area during the additional 50% warning period, the warning period is cancelled and an alarm condition initiated.

Unsetting Procedure

Unsetting an Area or System from a Keypad

The combination of user authority and Keypad area authority provide a choice of areas which can be unset from a particular Keypad, or a choice of unsetting the whole system. If an area is already unset, the option to unset the area will not be shown.

Unset Workshop

1. Enter your PIN code and press 'Enter'

**1=Unset 2=Eng
6=Text 7=Light**

1

2. If the Keypad has been configured to automatically unset areas when a user logs on then those area will automatically unset. If not, the display will show the user menu.

3. Press '1' to access the unsetting options.

System Unset

4. If the Keypad is programmed to permit unsetting of only one area, or if only one area is set, the area will immediately unset.

**0=System
1=Workshop.....**

5. If the Keypad area authority permits unsetting of more than one area, or if other area(s) remain set, the 'User Options Menu' will be displayed. If so, proceed as follows:

**0=System
1=Workshop.....**

6. The display will show the available unsetting options. If all options cannot be shown on the display, dots will appear after the last option to indicate that a further choice is available. Press the ▼ button to view the remaining choice, if applicable and make a selection.



Workshop Unset

7. Press the key corresponding to the area (or system) to be unset. The selected area (or system) will unset.

┘ Confirm LogOff

8. If no other functions are required, the user may 'Log Off' the system by pressing 'Quit'. The display will show 'Confirm Log Off'.



9. Press '┘' The display will return to displaying the log on prompt.

**Company Name
Enter-**

Unsetting Warnings

**Loading Door
Isolated**

When unsetting from a Keypad, the user is informed on the display of any warnings, e.g. circuits isolated or on soak. The 'Warning' display will appear for approximately 4 seconds during the unsetting procedure. If more than one warning exists, the display will automatically scroll through the list of warnings

Group Unsetting an Area or System from a Keypad

The combination of user authority and Keypad area authority provide a choice of areas which can be unset from a particular Keypad or a choice of unsetting the whole system. If an area is already unset, the option to unset the area will not be shown.

Unset Workshop

1. If the Keypad has been configured for 'Timed' or 'EnEx', on certain areas, these will automatically unset. If not, the display will show the user menu.

**1=Unset 2=Eng
6=Text 7=Light**

1

2. Press '1' to access the unsetting options.

Workshop Unset

3. If the Keypad is programmed to permit unsetting of only one area, or if only one area is set, the area will immediately unset.

**1=Unset 2=Set
4=Test 5=Eng.....**

4. If the Keypad area authority permits unsetting of more than one area, or if other area(s) remain set, the 'User Options Menu' will be displayed. If so, proceed as follows:

8=Group

8

5. If group unsetting is configured then when unset is selected, this will be option 8.

**Unset:
Set: 1 2 3**

6. Select group and the display will show the current unset status.

**Unset: + 2
Set: 1 3**

7. Select the area/s to unset and these will now be displayed in the unset status

↵

8. Select confirm and the group unset will take place

Group Unset

9. After group unset, the menu will be displayed and the user will be logged off.

Unsetting from a Keypoint

An area (or system) can only be unset using an Electronic Key providing the user has authority to unset the required area (or system), and that it is inserted in a Keypoint authorised to unset the area (or system).

1. Enter a valid and authorised Electronic Key at a Keypoint.
2. Press the 'Unset ' button.
3. The area (or system) authorised by the Keypoint and user authority will unset. The 'DAY' LED will be illuminated. Removing the Electronic Key will extinguish the 'DAY' LED.

Unsetting from a Keyswitch

To unset an area from a Keyswitch, turn the Keyswitch to the 'Unset' position. The area under the control of the Keyswitch will immediately unset.

Instant Automatic Unsetting

If the commercial event programmer has been programmed for automatic unsetting, areas under the control of the event programmer will immediately unset at the pre-programmed time each working day. The event programmer schedule will not operate on non-working days and holidays.

Unsetting After an Alarm

**Unset
Public Area**

If an alarm condition has occurred during the 'Set' period, the area sounder, audible alarm and/or strobe may be operating. The action of unsetting the area (or system) will cancel all warning devices. If the area has been programmed for 'Auto Reset', the warning devices may have automatically cancelled and the area reset.

**Alarm
Cct 34**

If the area incorporates an entry route, a pulsed tone emitted from the internal sounder(s) when the entry door is opened will indicate that an alarm has occurred during the set period.

**Alarm
Cct 36**

1. When the user has unset the area, the most recent event in the area log will be displayed on the area Keypad. If more than one event has occurred during the 'Set' period, the display will automatically scroll through the list of events in the area log.

Note: If unsetting from a Keypoint and an alarm has occurred during the 'Set Period' the 'Message' LED will be illuminated. Proceed to an area Keypad to view the area event log.

↵ = Reset

2. The display will then prompt for the user to 'Reset' the area by pressing the '↵' button.

**2=Set 4=Test
5=Eng 6=Text.....**

3. If all circuits are clear, the area will reset and the display will show the 'User Options Menu'. If all circuits are not clear, the display will continue to show the area log.

**Tel:XXXXXXXXXX
Ref:XXXXXX**

4. If the area is configured for 'Engineer Reset', the site number and service telephone number will be displayed after the last alarm event has been viewed. The user must contact the alarm company to report the condition. If the condition(s) causing the alarm is clear, the user may 'Reset' the area. However, if programmed for 'Engineer Reset', the user will be unable to 'Set' the area until an engineer attends the premises.



**0=Reset 2=Set
3=Log 4=Test**

5. If there are events in the area alarm log the 'Reset' option is displayed on the 'User Options Menu' when '↵' is pressed.

Resetting After an Alarm

General

The resetting method programmed by the alarm company engineer for each area and the system will depend on the particular security requirements of the area or system.

Customer Reset

Alarm Cct 35

When programmed for 'Customer Reset', the user can reset the system after viewing the area alarm log as follows:

↵ = Reset



1. After viewing the area log, check that all circuits are clear, then press '↵'

2=Set 4=Test
5=Eng 6=Text.....



2. If all circuits are clear, the area will reset and the display will show the 'User Options Menu'. If all circuits are not clear, the display will continue to show the area log. The user can return to the 'User Options Menu' without resetting the area by pressing 'Quit' instead of '↵' in this case, the display will show the 'Reset' and 'Log' options.

0=Reset 2=Set
3=Logs 4=Test.....

Note: When reset, the area log will be cleared of all events. The alarm events will be recorded in the system Event Log. If not manually reset, the area will automatically reset on the next occasion that the area is set, providing all circuits are clear.

Engineer Reset

An area can be configured for 'Engineer Reset' as either 'NA' or 'PA'. 'NA' (Night Alarm) Engineer Reset applies to the following alarm types:

'Night Alarm' circuit activation.
'24 Hour' circuit activation.
'Entry Route' circuit alarms.
'Entry Timer' alarms.

'PA (Personal Attack) & 'Engineer Reset' applies to:
'Panic Alarm' circuits.
'Duress' alarms.

The purpose of programming an area as 'Engineer Reset' is to inhibit setting following an alarm or tamper of the circuit types shown above. If an 'Engineer Reset' is required, the user is prompted to call the engineer after viewing the area log.

Engineer reset does not prohibit the user from resetting in the normal way, however, the user will be unable to set the system until an engineer has attended the premises.

Guardall Managed Reset

If an area is configured for 'Managed' Reset it enables the customer to reset the area (or system) after contacting the alarm company.



1. Enter your Pin Code and press ↓.

Tel:XXXXXXXXXX
Code:XXXX

2. The alarm log is displayed followed by the alarm company and alarm code numbers.

Company Name
Enter-XXXXX

3. After noting the code and telephone number log off by pressing 'Quit'.



Reset OK

4. Call the alarm company and quote the code. The operator will then quote the anti-code.

5. Log on using the 5 digit anti-code and the system will reset.



6. Log-off the Keypad and then back on using your ordinary PIN Code. The reset will be recorded in the event log.

Auto Reset

If 'Auto Reset' is programmed for an area and an alarm condition occurs when the area is set, the area external sounder (and strobe light, if programmed) will be turned off when the 'Bell Duration Time' has expired on condition the alarm has cleared. The area will automatically reset after the 'Bell Duration Time', only if the cause of the alarm condition has been removed, e.g., if a movement detector is triggered and is clear when the 'Bell Duration Time' has elapsed, the area will automatically reset. However, if the alarm condition remains, the area will not reset.

Bank Reset

The 'Bank Reset' function applies only to high security versions of the Windsor and enables a user with 'Bank Reset' authority to reset an area(s) configured for 'Bank Reset' after an alarm, without unsetting the area.

1. Enter a PIN code with 'Bank Reset' authority

1=Unset 3=Logs
4=Test 5=Eng.....

2. The external bell, internal sounder(s) and strobe light are turned off. User menu is displayed



3. Press '3' to view the area log.

Alarm
Lift Shaft Door

4. The log will automatically scroll through the list of alarm events

Alarm
Back Door



5. Press 'Enter' after viewing the last event in the area log, the display will return to 'User Options Menu'.

↓ = Reset

6. Select the 'Reset' option from the menu to reset the area.

Note: If a by-passable circuit is active, it will be automatically bypassed (up to the system bypass limit count). If a circuit is bypassed a fault tone will be heard at the Keypad.

Viewing the Logs

General

Area logs can be viewed or printed by an authorised user or engineer. Alarm log events are automatically cleared when the area is reset or next set, providing circuits are clear or inactive. All area events are also recorded in the system event log.

A 'Manager', 'Ordinary User', 'Set/Unset', 'Event Log User' and 'Bank Reset' user may view/print the area logs. Only a 'Manager', 'Engineer' can view/print the system event log.

Providing the area has not been reset, the log option will be displayed on the 'User Options Menu' at the area Keypad and an authorised user can select the area log for viewing.

Automatic scrolling can be stopped by pressing the ▼ or ▲ button. Scrolling is restarted using the 'Enter' button. Text descriptors of the displayed event will be shown on the display by pressing the 'Help' button. To quit from viewing the log, press the 'Quit' button.

Note: All logs use an abbreviated format to display the message, e.g., 'Us=User', 'Cct=Circuit', 'KP=Keypad', 'A=Area'. For full event log guide see back pages of this manual.

Viewing/Printing The Area Log

To view/print an area log, proceed as follows:

1. Enter an authorised user PIN code at the area Keypad

0=Reset 3=Logs
4=Test 5=Eng.....

3

2. Providing the area has not been reset, the 'Log' option will be shown on the 'User Options Menu'.

3. Select 3 (Logs) from the menu.

0=System
1=Workshop.....

▼

4. The display will show the 'Area Menu' (if events have occurred in more than one area).

5. Select the area log to be viewed/printed. Press ▼ to view other areas if necessary.

1=Display
2=Print

1

6. The display will offer a choice of displaying or printing the log.

7. Select 1 to view or 2 to print the log.

Alarm
Back Door

8. If viewing is selected, the most recent event will be displayed at the area Keypad. If printing is selected, the system printer will print the selected area log.

Viewing/Printing The System Event Log

An Manager user can select the system event log for viewing/printing when the area or system is unset as follows:

1. Enter valid and authorised user code at a Keypad.

2=Set 4=Test
5=Eng 6=Text.....

2. The display will show the 'User Menu' .

↓

3. Press '↓'.

1=Chime 2=KPOff
3=Event Log

4. The display will show page 2 of the 'User Menu'.

3

5. Select 3 (Event Log) from the 'User Menu'

1-Full 2=Filter

6. The display will show a choice between viewing/printing the complete event log or selected events (Filter).

1

7. Press 1 to view/print the complete event log or press 2 to view/print selected events.

1=Circuit 2=User
3=Keypad 4=Date

8. If 2 is selected, the 'Filter Options Menu' will be displayed.

Cct Number-

9. If 'Filter' is selected, select the 'Filter' option required and enter the circuit number, user number, Keypad number or date to be viewed/printed.

1=Display
2=Print

10. The display will offer a choice of displaying or printing the log.

1

11. Select 1 to display the event log or 2 to print the log.

Alarm
Back Door

12. If 'Display' is selected, the most recent event will be displayed at the area Keypad. If 'Print' is selected, the event log will be printed on the system printer.

Testing

Selecting Test Functions

The 'Test' option is shown on the user menu when a user authorised to test the area or system, logs on to a Keypad. To test the areas (or System) proceed as follows:

4=Test 5=Eng
6=Text.....

4

1. Select 4 from the 'User Options Menu'.

0=System
1=Workshop

1

2. The area(s) (or system) which may be tested at the particular Keypad by the user will be displayed.

3. Select the area (or system) to be tested, e.g. 1 for Workshop.

1=Sounders
2=Walk Test

▼

4. The various tests available will be displayed. Press the ▼ button to view the complete selection.

3=Unset Test
4=Comms

Note: The 'Comms'(communicator) Test is only displayed when the PIN code used to log on has the authority of 'Manager', 'Engineer' or 'Ordinary User':

5. The user can select the test function required from the 'Test Functions Menu'.

Testing The External Sounder

1=Sounders
2=Walk Test

1

1. Select 1 from the 'Test functions Menu'

1=Sounder
2=Audio 3=Strobe

1

2. The 'Sounders Menu' will be displayed

3. Select 1 (Sounder) to test the external sounder.

Sounders On
Seconds Left-05

▼

4. This will activate the external sounder for the pre-programmed test period (max. 20 seconds). The remaining test time is shown on the Keypad display.

Note: To stop the external sounder test, press any button on the Keypad

2=Audio 3=Strobe

5. When the external sounder test is completed or stopped, the display will return to the 'Sounders Menu' with the 'Sounder' option removed.

Testing The Internal Sounder

2=Audio 3=Strobe

2

1. Select 2 (Audio) from the 'Sounder Menu' to test the internal sounder(s).

Audio On
Seconds Left-05

▼

2. All internal sounders for the area (or system) will be activated for the pre-programmed test period (max. 20 seconds). The remaining test time is shown on the Keypad display

Note: To stop the sounder test, press any button on the Keypad.

3=Strobe

3. When the internal sounder test is completed or stopped, the display will return to the 'Sounder Menu' with the 'Audio' option removed.

Testing The Strobe

3=Strobe

3

Strobe On
Seconds Left-05

▼

1=Sounder
2=Audio

2=Walk Test
3=Unset Test

1. Select 3 from the sounder menu to test the strobe light(s)
2. The strobe light(s) for the area (or system) will be activated for the pre-programmed test period (max. 60 seconds). The remaining test time is shown on the Keypad display.
Note: To stop the strobe test, press any button on the Keypad.
3. When the strobe test is completed or stopped, the display will return to the 'Sounder Menu' with the 'Strobe' option removed. If all tests have been performed, the display will automatically return to the 'Test Functions Menu'.
4. Press 'Quit' to return to the 'Test Functions Menu'.

Walk Test

Selecting option 2 from the 'Test Function' menu will enable the user to carry out a walk test of the area (or system). The user may carry out an 'Automatic' walk test or 'Manual' walk test. The 'Automatic' walk test will require the user to only test circuits which have not been activated since the area was unset or last tested (whichever is the most recent). The 'Manual' walk test will require the user to test all circuits. The 'Walk Test' function cannot test PA circuits, Excalibur lighting circuits, or circuits with an unset response.

1=Sounders
2=Walk Test

1

1=Auto 2=Manual

Back Door
Not Tested

Canteen PIR
Not Tested

3=Unset Test
4=Comm Test

1. Select 2 from the 'Test Functions' menu.
2. The display will show a choice between 'Automatic' or 'Manual' walk testing. Select as required, (1 or 2).
3. The display will show the first circuit which has not been tested, e.g., 'Back Door'.
4. As each circuit is activated during walk testing, the Keypad bleeper will emit a 3 second test tone. When a circuit has been successfully tested, it is removed from the circuits 'Not Tested'.
5. When the user returns to the Keypad, any circuits which have not been tested will be shown on the Keypad display. The user must test all required circuits before the display will return to the 'Test Functions' menu. The 'Walk Test' function will be removed from the menu.

Note: The user can quit from the walk test function by pressing the 'Quit' button on the Keypad, however any circuits not tested will be recorded in the system event log.

Unset Test Functions

The 'Unset Test' can be selected from the 'Test Functions' menu. This test enables the user to test panic alarm circuits and all 24 hour monitoring circuits. A 'Manager', 'Engineer' or 'Ordinary User' can also carry out a manual detector response test of all detector circuits which have been programmed for 'Detector Test'. This test is in addition to an automatic 'Detector Test' which is carried out daily at a pre-programmed time.

2=Walk Test
3=Unset Test

3

1. Select 3 from the 'Test Functions' menu.

1=PA 2=24Hr
3=Detector

2. The 'Unset Test Functions' menu is displayed. Select required unset test function.

Panic Alarm Testing

1=PA 2=24Hr
3=Detector

1. Selecting 1 from the 'Unset Test Function' menu will permit the user to manually test all panic alarm buttons without causing a full alarm condition or transmitting an alarm signal to the Communications centre.

Cct 6
Not Tested

2. The display will scroll through the circuits not tested. When all PA circuits have been activated, the display will indicate 'All Tested' and automatically return to the 'Unset Test Function Menu', with PA removed. However, for security reasons, a limiting timer is incorporated into the PA test function which will automatically discontinue the test condition after a period of 20 minutes, thereby ensuring that the user cannot leave the system in this condition beyond the pre-set time. An audible warning is emitted when only 5 minutes of the test time remains. All PA button tests are recorded in the system event log.

PA Test
All Tested

3. Pressing a Panic Alarm button during the 20 minute PA Test period will activate the internal sounder(s) only and display the 'All Tested' message on the screen. Once the last system is tested the display will revert back to the 'Unset Test Functions' menu with the PA Test function removed.

Quit

4. Pressing the 'Quit' button on the Keypad at any time during the 20 minute PA Test period will return the PA circuits to the normal 24 hour monitoring mode and will return the display to the 'Unset Test Functions' menu with the PA Test function removed.

2=24Hr
3=Detector

Cct-1 Alarm
1=Temp By-pass

Note:- Should the PA remain set after test, the system will allow a temporary by-pass. Either clear the alarm manually, or initiate the Temp By-pass by pressing 1 on the keypad.

24 Hr Test

Selecting 2 from the 'Unset Test Function' menu will permit the user to test all circuits which are armed whether the system is set or unset (24 hour monitoring circuits), with the exception of panic alarm circuits. This will not cause a full alarm condition or transmitting an alarm signal to the alarm company central station. As with Panic Alarm testing, a 20-minute limiting timer is incorporated into the 24 Hr test function, ensuring the engineer/user cannot leave the system in this condition. To carry out a 24 hour circuit test proceed as follows:

2=24Hr
3=Detector

2

1. Select 2 from the 'Unset Test Function' menu

Fire Door
Not Tested

2. The display will show the first circuit which has not been tested, e.g., 'Fire Door'.

Secure Store
Not Tested

3. As each circuit is activated during testing, the area sounder will emit an alarm tone while the circuit is open or activated and will cease when the circuit is closed or cleared. When a circuit has been successfully tested, it is removed from the circuits 'Not Tested'.

24Hr Test
All Tested

4. When the user returns to the Keypad, any circuits which have not been tested will be shown on the Keypad display. On completion of tests the display will inform you that all tests are complete.

1=PA 3=Detector

5. The user should test all required circuits before the display will return to the 'Unset Test Functions' menu. The '24 Hr' function will be removed from the menu.

Note: The user can quit from the test function by pressing the 'Quit' button on the Keypad, however, any circuits not tested will be recorded in the system event log.

WARNING:- Should the 24Hr option be configured for **'fire'** and the alarm circuit is not cleared before completing all tests, (or before the time limit expires), an actual alarm condition will occur. Please ensure that a successfully tested fire circuit is cleared before moving on.

Detector Test

Detector Test
Busy Please Wait

1. Selecting 3 from the 'Unset Test Function' menu will permit the user to undertake a manual test of all detectors programmed for 'Detector Test'.

3

Detector Test OK
Press any Key

2. The response of each detector is automatically tested and the result of the test displayed on the area Keypad display, e.g., 'Detector Test OK' or 'Detector Test Failed'.
3. This test is in addition to the 'Automatic Detector Test' programmed to operate daily at a pre-set time. The manual and automatic detector test will operate for a pre-programmed test period. All detector test results are recorded in the system event log.

Detector Failed
Press any Key

4. The result of the 'Detector Test' will be displayed on the area Keypad LCD, as follows:

Detector Test OK All detectors tested.
Detector Test Failed One or more detectors failed to respond

Communications Test

A 'Manager' or 'Ordinary User' or 'Engineer' can test the operation of the system communicator(s) if fitted as follows:

4=Comms

1. Select 4 from the 'Test Functions' menu

4

Primary
Busy Please Wait

2. The communicator test will begin. The duration of the test will depend on the type of communication device installed.

1=Sounders
2=Walk Test

3. Press 'Quit' to return to the 'Test Functions Menu'

Quit

4=Test 5=Eng
6=Text.....

4. Press 'Quit' to return to the 'User Options Menu'

Editing Text Descriptors

General

The text descriptors, which appear on the Keypad displays for circuits, bypass groups, areas, users names and company name, are normally programmed by the engineer on installation. However, a user with 'Manager' authority can edit text descriptors when required, as follows:

Note: The engineer can only edit The Company Name value.

Selecting Text To Be Edited

4=Test 5=Eng
6=Text.....

6

1. Enter a user PIN code with 'Manager' authority

2. Select '6' from the 'User Options Menu'

1=Circuit 2=User
3=Area 4=Group

1

3. The Text Edit' menu is displayed. Select the title to be edited.

Cct Number _ _

2

5. If 1='Circuit' is selected, the display will prompt for the required circuit number. Enter a circuit number (01 to 128 max.). The display will show the existing text descriptor against the selected circuit number.

User Number _ _

3

6. If 2='User' is selected, the display will prompt for the required user number. Enter a two-digit user number. The display will show the existing text descriptor against the selected user number.

Area Number _

4

7. If 3='Area' is selected, the display will prompt for the required area number. Enter a one-digit area number (1 to 7 Max) or system (0). The display will show the existing text descriptor against the selected area or system.

Group Number _

8. If 4='Group' is selected, the display will prompt for the required bypass group number. Enter a one digit bypass group number (1 - 6). The display will show the existing text descriptor against the selected bypass group number.

Editing Text Characters

User Number 11
W. Wood

Help

1. The first character of the text descriptor will be flashing.

2. By pressing 'help' at this point the display will prompt you for a 'Text Number'.

Text Number _ _

3. Using the **text library** on [page 37](#) a combination of 2-digit codes may be entered for ease of use.

↵

For example:-

Enter '61' (which stands for 'PIR In'), and then confirm it.

Cct number 2
PIR In

Enter a space character, (i.e. press 9 on keypad, a blank space will be written to the display). Press help again.

Text Number _ _

Again you are prompted for a Text Number. Enter '09', for example, and then confirm it.

Cct number 2
PIR In BAR

Circuit 2 now has the desired label. Should the text library not contain the desired label the keypad provides a means to enter the text manually.

Here is a list of all available characters.

ABCDEFGHIJKLMNOPQRSTUVWXYZ
abcdefghijklmnopqrstuvwxyz .-
/#%^&@<>0123456789

(Notice the space between the 'z' and the 'full stop').

By using the ▼ key, you can scroll through the characters from **A** to **9** and using the ▲ key you can scroll from **9** to **A**.

However, a shortcut may be employed which provides a means of quickly moving the display close to the character required using the numbers on the keypad. The numeric keys on the Keypad can be used as follows:

- 1=A
- 2=M
- 3=Z
- 4=a
- 5=m
- 6=z
- 7=1
- 8=9
- 9=' ' (space)
- 0=clear all characters to the right



4. When the required character is displayed, press the 'Enter' button to move the cursor to the next character. Repeat for all characters and spaces in the text descriptor.



Note: Entering a character will overwrite the existing character. To remove any excess existing characters, press '0'. To edit a particular character, press 'Enter' until the required character is flashing.



5. Press 'Quit' to save the text descriptor.

Cct Number-

6. The display will prompt for the next number of the selected function.



7. Press 'Quit'.

1=Circuit 2=User
3=Area 4= Group

8. The display will return to the 'Text Edit Menu'.



9. Press 'Quit' again.

6=Text 8=PIN
↵ = Next Page

10. The display will return to the 'User's Menu'.

Text Library

Number	Text
00	Accounts
01	Admin
02	Alarm
03	Alert
04	Area
05	ATM
06	Attack
07	Auxiliary
08	Bank
09	Bar
10	Beam
11	Bedroom
12	Branch
13	Cafe
14	Canteen
15	Ceiling
16	Cleaner
17	Communicator
18	Computer
19	Corridor
20	Counter
21	Dispatch
22	Door
23	Downstairs
24	Dualtech
25	Entry
26	Exit
27	Factory
28	Fence
29	Fire
30	Freezer
31	Fridge
32	Garage
33	Gate
34	Guard
35	Hall
36	Home
37	House
38	Infrared
39	Keypad
40	Kitchen
41	Landing
42	Library
43	Lobby
44	Lock
45	Lounge
46	Manager

Number	Text
47	Master
48	Medical
49	Microwave
50	Monitor
51	Movement
52	Office
53	PA Button
54	Panel
55	Panic
56	Partition
57	Passive
58	Perimeter
59	PIR
60	PIR B
61	PIR In
62	PIR On
63	Point
64	Purchasing
65	Quality
66	Reception
67	Remote
68	Restaurant
69	Roof
70	Room
71	Safe
72	Security
73	Sensor
74	Shop
75	Showroom
76	Site
77	Smoke
78	Stairs
79	Stores
80	Strobe
81	System
82	Tamper
83	Teller
84	The
85	Till
86	Ultrasonic
87	Upstairs
88	User
89	Vault
90	Warehouse
91	Window
92	Zone

Modifying Light Controls

General

The engineer on installation normally programs the operation of security lighting on the Windsor. However, a user with 'Manager' authority can modify and test the lighting zones as follows:-

- (a) Modify the 'On' duration when the light zone is automatically triggered.
- (b) Modify the 'On' and 'Off' times for 'Timer Control'.
- (c) Modify the 'Off' time after dusk.
- (d) Manually operate the lighting zones.
- (e) Test the lighting zones.

**2=Set 4=Test
5=Eng 6=Text.....**

1. Log on to a system Keypad using a 'Manager' PIN code. The user options will be displayed

**7=Light 8=PIN
↵ = Next Page**

2. Select option 7, 'Light'

7

**Light Zone
Number-**

3. The display will prompt for the required light zone number. Enter a one-digit zone number (1 to 4).

1

**3=Off Time
5=Manual 6=Test**

4. The 'Light Zone' menu will be displayed.

Operations

In Operations the light zone can be configured for two modes of operation, and these are 'Alarm' and/or 'Set/Unset'. If alarm is configured, the light zone will be active for the programmable time if an alarm occurs. If set/unset is configured, the light zone will be active for the programmed time if the area is set or unset.

**Light Zone - 1
Auto Time-00**

1. Select 1 from the 'Light Zone' menu

1

**Light Zone - 1
Auto Time - 03....**

2. The display will show the existing programmed 'On' duration for the selected light zone. This is called the 'Auto Time'. The existing duration will be flashing.

**Light Zone - 1
Alarm Off.....**

3. To change the duration, enter a new two-digit duration in the range 01 to 99 minutes.

1

4. To have a light zone active when an alarm occurs select 1 to program alarm 'On'.

**Light Zone - 1
Alarm On.....**

5. Light zone 1 is now on for alarm activations.

1

6. In the same manner, to have a light zone active when an area sets/unsets, select '1'.

**Light Zone - 1
Set/Uns On.....**

7. Selection of 1 will program Set/Unset 'On'.

Quit

8. Press 'Quit'.

**1=Operations
2=On Time**

9. The display will return to the Light Zones menu.

Timed Control

Timed control enables a light zone to be programmed to switch on and off at pre-programmed times. This gives a capability to provide courtesy lighting at necessary times e.g. light a driveway when people are coming home.

On Time Set to
00:00

2

1. Select 2 from the 'Light Zones' menu. The display will show the current on time. A time of 00:00 means that this option is disabled.

On Time
HH:MM

↓

2. Press '↓' to change the current on time. The display will prompt for a new 'on' time.

On Time Set to
22:50

3. Enter a new 'on' time in 24 hour format. The display will show the new 'on' time.

2=On Time
3=Off Time

Quit

4. Press 'Quit' to return to the light zone menu.

Off Time Set to
00:00

3

5. Select 3 from the light zones menu. The display will show the current 'off' time.

Off Time
HH:MM

↓

6. Press '↓' to change the current 'off' time. The display will prompt for a new 'off' time

On Time Set to
07:00

7. Enter a new 'off' time in 24 hour format.

3=Off Time
4=Dusk Time

8. Press 'Quit' to return to the light control menu.

Dusk Control

Dusk Time Set to
07:00

If 'Dusk Control' is 'On' for a light zone when programmed by the engineer the lights will be turned on automatically at dusk, and turned off at the programmed 'Off' time. To view or edit the 'Dusk Control' function, proceed as follows:

3=Off Time
4=Dusk Time

4

1. Select 4 from the 'Light Zones' menu.

Dusk Time Set to
07:00

2. The display will show the current 'Dusk time'.

Dusk Time
Enter HH:MM

↓

3. Press 'Enter' to change the current 'Dusk time'.

Dusk Time Set to
19:00

4. Enter a new 'Dusk time' (HH:MM), e.g., 17:00. A time entered of 00:00 will turn off this feature

5. When entered, screen will show this message. Press enter to revert to Light menu.

Quit

6. Press 'Quit' to return to the 'Light Zones Menu'

4=Dusk Time
5=Manual 6=Test

Manual Control

Selecting 'Manual Control' provides the user with the facility to manually turn the light zone 'on' or 'off', or to manually turn the zone 'on' for a programmed duration. To manually turn the light zone 'on' or 'off' and to set the on duration, proceed as follows:

5=Manual 6=Test

1. Select 5 from the 'Light Zones' menu. The 'Manual Control' menu will be displayed.

5

0=Off 1=On
2=Timed.....

2. Select '0' to turn the light zone off or '1' to turn the light zone on.

1=On 2=Timed
3=Duration

3. Select 2 from the 'Manual Control' menu to select the 'Timed' function. If selected, the zone will be turned on for the programmed duration.

2

0=Off 1=On
2=Timed.....

5. To set the programmed 'On' duration, select 3 from the 'Manual Controls' menu.

3

Light Zone 1
Duration - 010

6. The current 'On' duration will be displayed. The current 'On' duration will be flashing.

Light Zone 1
Duration - 060

7. Enter a new three-digit duration, if required, in the range 1 to 255 minutes.

Quit

8. Press 'Quit' to return to the 'Manual Controls' menu.

3=Duration

Quit

9. Press 'Quit' to return to the 'Light Zones' menu.

5=Manual 6=Test

Testing Light Zones

The light zones are not tested as part of a 'Walk Test'. However light zones can be tested at any time by the user.

6

**Light Zone 1
Walk Test**

Quit

**Light Zone
Number-**

**Light Zone
Number 2**

**Light Zone 2
Walk Test**

Quit

**7=Light 8=PIN
9=Bypass**

1. Select 6 from the 'Light zones' menu. All Trigger Circuits in the selected light zone can be 'Walk Tested'.
2. The Keypad display will show the light zone being tested.
- 3 On completion of the 'Walk Test', press 'Quit' twice.
4. The display prompt for another light zone number to be viewed/modified or tested.
5. Select another light zone to be 'walk tested'.
6. The Keypad display will show the light zone being tested.
7. Press 'Quit' three times to return to the 'User Options Menu'.

Changing PIN Codes

General

Any user can change their own PIN code at any time, provided the selected PIN code is not already being used. All user PIN code changes are recorded in the system event log.

Changing Own PIN Code

2=Set 4=Test
5=Eng 6=Text.....

8

7=Light 8=PIN
↵ = Next Page

1=Own PIN
2=User PIN

1

Old PIN
Number-

New PIN
Number

Re-Enter PIN
Enter-

↵

7=Light 8=PIN
↵ = Next Page

The option 8 'PIN' is always made available to any user and is included in the user options menu after logging on. To change your own PIN code proceed as follows:

1. Select 8 from the user options after logging on at a Keypad.
2. You may require to use the ▼ button to see the option 8 displayed.
3. The display may prompt for the identity of the PIN holder. Either a users or your own (Manager User Only). In this case the appropriate option is to press '1'.
4. The display will prompt for the user's old PIN code. Enter old PIN code.
5. The display will prompt for a new PIN code. Enter your new PIN code or insert your Electronic Key
Note: If the PIN code selected is already in use, the display will show that the selected code is not available. Re-enter another PIN code. See also 'PIN Code Clash'.
6. The display will prompt for the new code to be re-entered. Re-enter your new PIN code or re-insert your Electronic Key
7. Press enter' to register new PIN code and to return to the user options menu.

Changing Other User PIN Codes

2=Set 4=Test
5=Eng 6=Text

8

7=Light 8=PIN
↵ = Next Page

Old PIN
Number-

1=Own PIN
2=User PIN

2

User Number

- A 'Manager" user can change other users PIN codes as follows:
1. Select 8 from the user options menu after logging on at a Keypad.
 2. You may require to use the ▼ button to see the option 8 displayed.
 3. The display will prompt for the user's old PIN code. Enter 'Manager" PIN code.
 4. The 'Manager' is given a choice of changing their own PIN code or changing an other user PIN code. Select 2 to change another user's PIN code.
 5. The display will prompt for the user number. Enter a desired user number.

J Smith
↓ = Change PIN

6. The display will show the text descriptor for the selected user and give the Manager' the option of changing the PIN code. Press 'Enter' to change the user's PIN code

New PIN
Enter-

7. The display will prompt for a new PIN code. Enter new PIN code or insert their Electronic Key.

Note: If the PIN code selected is already in use, the display will show that the selected code is not available. Re-enter another PIN code. See also 'PIN Code Clash.

Re-Enter PIN
Enter-

8. The display will prompt for the new code to be re-entered. Re-enter new PIN code or re-insert their Electronic Key.

Note: If the re-entered PIN code is not the same as the original new code entered, the display will show that the codes do not match. Enter the new PIN code again

User Number-

9. Press 'Enter' to register new PIN code. The display will prompt for another user number.



2=User PIN

9. Change another user PIN code or press 'Quit' to return to the 'User Options Menu'.



7=Light 8=PIN
↓ = Next Page

Using this method a Manager user can change the PINs of all users, or add additional Electronic Keys as required.

Bypassing Circuits or Groups

Any circuits which have been programmed as 'By-passable' can be bypassed by an 'Engineer', 'Manager' or 'Ordinary User', providing they are authorised to do so, when the area is set. Bypassed circuits or groups will be automatically re-instated when the system is unset, providing doing so will not cause an alarm condition. Any circuits in any area which are already set cannot be bypassed.

A bypass limit may be programmed to limit the number of circuits that can be bypassed at any one time. To bypass a circuit or group, proceed as follows:

**2=Set 4=Test
5=Eng 6=Text.....**

1. Log on using a 'Manager', 'Ordinary User' PIN code

**7=Light 8=PIN
9=Bypass.....**

2. The user options are displayed.

9

3. Select '9' from the 'User Options Menu:. You may require to press the ▼ button to display option '9'.

**1=Circuit
2=Group**

4. The choice of bypassing either groups or circuits is displayed. Select 1 to bypass a circuit or 2 to bypass a group.

Circuit Number

5. The display will prompt for the circuit or group number to be bypassed. If a circuit is to be bypassed, enter a circuit number (01 to 128). If a group has to be bypassed, enter a one digit group number (1 to 6).

**Loading Bay
Bypassed**

6. The display will show the text descriptor for the circuit or group selected, together with the condition of the circuit or group after selecting bypass (e.g., 'By-passed', 'Normal', or 'Active').

Circuit Number

7. The display will prompt for another bypass circuit or group number.

**1=Circuit
2=Group**

8. Enter another circuit or group number to be bypassed or press 'Quit' to return to the choice of bypassing either groups or circuits.

Quit

**9=Bypass
↵ = Next Page**

9. Repeat the process or press 'Quit' to return to the 'User Options Menu'

ATM Bypass

The ATM Bypass' function is only applicable to Windsor High Security Systems and is designed to permit a user with 'ATM Bypass' authority to bypass one automatic telling machine (ATM) at any one time during servicing, etc. Having bypassed the ATM, the user has a pre-programmed working time of between 1 and 99 minutes, with a pre-programmed extension period of between 1 and 40 minutes. At the end of the working time, an ATM which remains bypassed will be automatically put back on-line. In order to bypass an ATM, proceed as follows:

**Company Name
Please Wait.....**

1. Enter a user PIN code with 'ATM' authority at the Keypad controlling the ATMs. The Keypad will display 'Please Wait...' (PIN code delay programmed). The user must re-enter the PIN code at the end of a pre- programmed delay period. If no delay period is programmed, the user must enter the PIN code twice.

**0=ATM 5=Time
↓ = Next Page**

2. The display will show the 'ATM' menu. To bypass an ATM, select 0, from the 'ATM' menu.

0

ATM Number-

3. The display will prompt for the ATM number to be bypassed.

**ATM Bypassed
↓=RemoveBypas**

4. If the ATM can be bypassed, the display will show the number of the ATM bypassed and will give the user the choice of putting the ATM back on line. Press 'Enter' to remove the Bypass.

**Minutes Left-15
Press any Key**

5. To display the working time left for the ATM, select 5 at any time.

5

**Minutes Left-09
More Time?**

Note:- When ten minutes of the pre-programmed working time remains, the Keypad sounder will emit a warning tone.

6. If an extension time option is programmed and is required, the user can extend the working time up to the limit of the pre- programmed extension time by pressing 'Enter' when the display shows 'Minutes Left xx - More Time?.'

↓

**Minutes Left-20
Press any Key**

7. The ATM will be put on line on expiry of the working time or extension time, if selected

Note: An ATM cannot be put back on line manually if any circuit protecting the ATM is active.

Changing ATM PIN

To change an ATM PIN proceed as follows :

0=ATM 5=Time

1. Log on as an ATM user. Select '↓' from the next page.

↓

8=PIN

2. Select 8 for PIN.

8

**OLD PIN
Enter**

3. Enter your old PIN.

NEW PIN
Enter

4. Enter your new PIN

NEW PIN
Re-enter

5. Re-enter your new PIN.

Quit

6. Press 'Quit' to return to users menu.

8=PIN
↓ = Next Page

Selecting the Chime Function

Certain circuit types (Entry Points, Alarm Circuits, Push Buttons etc..) can be selected as 'Chime' circuits when the area or system is in the 'Set' or 'Unset' mode. Selecting 'Chime' for a circuit will cause an audible 'Chime Tone' to be emitted from all internal sounders in the area(s) if the circuit is activated. The 'Chime' function can be selected as either 'on' or 'off' for permitted circuits by a user with 'Manager' or 'Ordinary' authority, or by the alarm company engineer. To select the 'Chime' function for a circuit, proceed as follows:

**2=Set 4=Test
5=Eng 6=Text.....**

1. Log on at the area (or system) Keypad using a 'Manager' or 'Ordinary User' PIN code.

**1=Chime 2=KPOff
3=Event Log**

2. Press 'Enter' to move the display to page 2 of the user options menu. Select 1 from the user the options menu.

1

Circuit Number

3. The display will prompt for the circuit number

**Cct-01
Front Door**

4. Enter a two-digit circuit number.

**Cct-01
Chime Off**

5. The display will show the circuit descriptors and the current status of the 'Chime' function, e.g., on or off.

**Cct-01
Chime On**

6. Press '0' to turn the chime function 'Off' or '1' to turn the chime function 'On'.

0

Circuit Number

7. Press 'Quit' to return to the user options menu. Pressing 'Quit' without changing the 'Chime' status will not change the current 'Chime' status.

Quit

**1=Chime2=KPOff
3=Event Log**

8. Repeat for other circuits to be on/off 'Chime'. or Press 'Quit' to return to the 'User Options Menu'.

Disabling a Keypad

A 'Manager' user can disable a Keypad in an authorised area if required, providing the area is unset. Disabling a Keypad will render all buttons on the Keypad inoperative, however the Keypad display will continue to operate normally. To disable a Keypad, proceed as follows:

2=Set 4=Test
5=Eng 6=Text.....

↓

1=Chime 2=KPOff
3=Event Log

2

Keypad Number

1

Keypad 1
On

0

Keypad 1
Off

Quit

Keypad Number

Quit

2=KP Off
3=Event Log

1. Log on using a 'Manager' PIN code at the Keypad to be disabled, or any other authorised Keypad.
2. Press 'Enter' to move the display to page 2 of the user options
3. Select 2 from the user options
- 4.. The display will prompt for the Keypad number to be disabled. Enter a one-digit Keypad number(1 to 8).
5. The display will show the current status of the selected Keypad, e.g., 'On'
6. Press '1' to turn the Keypad 'On' or '0' to turn the Keypad 'Off'.
7. Press 'Quit' to register the status . (Pressing 'Quit' without changing the status will keep the current status).
8. The display will prompt for another Keypad number.
9. Enter another Keypad number to be disabled/enabled, or press 'Quit' to return to the User Options Menu

Changing User Authority

The user authority can be allocated and changed by a 'Manager' user. To allocate or change the authority of a user, proceed as follows:

2=Set 4=Test
5=Eng 6=Text.....

2

1=Chime 2=KPOff
3=Event Log

▼

4=User
5=Time 6=Keys

4

User Number--

User-03
W. Smith

User 03
Off

0=Off 1=Manager
2=Ordinary.....

1. Log on to a Keypad using a PIN code with 'Manager' authority.
2. Press 'Enter' to move the display to page 2 of the user options.
3. Press ▼ to view the remaining page 2 user options.
4. Select 4 from the user options menu.
5. The display will prompt for the user number whose authority has to be allocated or changed. Enter a two-digit user number (03-50).
6. The display will show the selected user number and any user name programmed against the user number.
7. Approximately 4 seconds later, the display will show the current authority allocated to the selected user.

Note: When allocating an authority to a new user, the default authority is shown, e.g. "Off".

8. Select an authority level for the selected user. A list of authority levels is shown on the display by pressing the 'Help' button. To view the complete selection, use the ▼ button. Alternatively, enter a number corresponding to the authority level from the list below.

There are 12 authority menu options on 2 menu pages.

0=Off
1=Manager
2=Ordinary
3=Set/Uns
4=Set
5=Event Log
6=Bank Rst
7=Reset
8=Duess
9=ATM
↵=Next Page

1=Cleaner
2=Unset
3=Access
↵=Next Page

User Type	User Authority
None	No access permitted.
Manager	All user functions for programmed areas.
Ordinary	All user functions for programmed areas, except viewing/printing the event log, isolating a Keypad, changing user authority and changing other user PIN numbers.
Set/Unset	Set, unset, logging the engineer on and test functions for programmed areas and view/print area log(s).
Set Only	Set, logging the engineer on and test only for programmed areas.
Reset	Authority to carry out Customer Engineer Reset (if programmed) in authorised areas.
Duress	Special PIN code available to all users and used in the event of a demand to unset the system or area under duress. Use of this PIN code will unset the areas(s), but will transmit a 'silent' personal attack message to the alarm company central station. Incrementing the first digit of the any PIN code will have the same effect.
Bank Reset	Special PIN code that performs Bank reset, view area log, bypass and perform reset (only HS Version).
ATM	Special PIN code that performs ATM bypass when logged on (only HS version).
Event Log	Can only view the event log.
Cleaner	Set and Unset only.
Unset	Unset only.
Access	A user with Access user type authority has no authority for any menu function. The only action on entry of an Access user PIN code is to trigger and output to open a door.

**Use -04
Ordinary**

8. The display will show the selected authority, then prompt for the area authority to be allocated, beginning with area 1.

**User-04
Area 1- Off.....**

9. Select 1 if area authority for area 1 is to be allocated to the selected user, or select '0' if no authority is to be given for area 1

1

**User-04
Area 1 - On.....**

10. The display will then move on to other areas configured for the system. Repeat the above procedure for each area, as applicable.

**User-04
Area 2 - Off.....**

**User-04
Gp1-Off Gp2-Off..**

11. The system will then prompt for authority to be allocated to bypass any programmed groups of circuits. Again, select 1 for authority or 0 for no authority. Repeat the procedure for each group, as applicable.

Note: Up to six bypass groups can be configured .

User Number--

13. When authority has been allocated to the user, press 'Quit'. The display will prompt for the next user number. Repeat procedure for any other users, or return to the user options menu by pressing 'Quit'.

Quit

**4=User 5=Time
6=Keys.....**

Note: The ▲ ▼ keys can be used to move between fields without editing the current value.

Changing the System Clock

A user with 'Manager' or Ordinary User' authority can change the system clock by a maximum of 75 minutes in either direction. All changes to the system clock are recorded in the system event log. To change the system clock, proceed as follows:

2=Set 4=Test
5=Eng 6=Text.....



1=Chime 2=KPOff
3=Event Log.....



4=User
5=Time 6=Keys



Clock Set to
17:00

Clock
Enter HH:MM



Clock
Enter 17:10

Clock Set to
17:10



5=Time 6=Keys

1. Log on to any Keypad using a 'Manager' or 'Ordinary User' PIN code.
2. Press 'Enter' to move the display to page 2 of the user options menu.
3. Press ▼ to view the remaining page 2 user options. Select 5 from the user options menu
4. The display will show the current time.
5. Press 'Enter' to change the time. You may now change the time, by up to 75 minutes only.
6. Enter four digits for the new time in the format HH:MM in 24 hour format.
7. The display will register the new time.
8. Press 'Quit' to return to the user options menu.

Programming Electronic Keys

A user with 'Manager' authority can add Electronic Keys to replace the user PIN code allocated. This option is only available at a Keypad with an LCD display. All Electronic Key allocations are recorded in the system event log as PIN changes. To programme an Electronic Key, proceed as follows:

**2=Set 4=Test
5=Eng 6=Text.....**



**1=Chime 2=KPOff
3=Event Log.....**



**4=User
5=Time 6=Keys**



User Number--

**User - 04
Insert Key**

Key OK

Key FAIL

User Number--



**6=Keys
↵ = Next Page**

1. Log on to any Keypad using a 'Manager' PIN code.
2. Press 'Enter' to move the display to page 2 of the user options menu.
3. Press ▼ to view the remaining page 2 user options.
4. Select 6 from the user options menu
5. The display will prompt for the user number.
6. Enter a two-digit user number (02-50). The display will then prompt for the Electronic Key to be inserted.
7. Insert the Electronic Key to be allocated to the user into the socket
8. If the Electronic Key is read correctly the display will show 'Key OK'. If not, the display will show 'Key Fail'.
9. The display will prompt for the next user number.
10. Repeat for other users, if applicable, or press 'Quit' to return to the user options menu.

The Event Programmer

Windsor 500 incorporates a time scheduler, referred to as the event programmer. The event programmer can have up to 4 different time schedules which can be applied to any of the control panel areas. Each schedule has a number of times for each day of the week. The actual times in the schedule depends on the type of software fitted to the control panel (commercial or high security) as shown;

High Security Schedule	
Time	Action
Shunt On	At this time all circuits in the programmed shunt group will be shunted (alarms will be ignored).
Open 1	The earliest time that the area(s) can be unset.
Close 1	The latest time that the area(s) can be unset.
Set 1	The normal auto set time.
Open 2	The earliest time that the area(s) can be unset.
Close 2	The latest time that the area(s) can be unset.
Set 2	The late working auto set time.
Shunt Off	At this time all circuits in the programmed shunt group will be returned to the normal state.

Commercial Schedule	
Time	Action
Unset 1	The time that the area(s) will be auto unset (normally the morning unset time)
Set 1	The normal auto set time (normally the lunch set time).
Unset 2	The time that the area(s) will be auto unset (normally the afternoon unset time)
Set 2	The normal auto set time (normally the evening set time)

The following procedures assume the event programmer has been programmed by the installation engineer. A user with 'Manager' or 'Ordinary' User authority can normally only view the event programmer for an authorised area from a Keypad authorised for the same area. A 'Manager' or 'Ordinary' User can select late working, add holidays and extend the set time. The system may be programmed to allow such users to change the schedule times.

Note:- The event programmer can only be viewed when the area is unset. All changes to the event programmer are recorded in the system event log. To access the event programmer proceed as follows:

2=Set 4=Test
5=Eng 6=Text....



1. Log on at an area Keypad using a 'Manager' or 'Ordinary' User PIN code.
2. Press 'Enter' to move the display to page 2 of the user options.

1=Chime 2=KPOff
3= Event Log



3. Press ▼ to view the remainder of page 2 user options.

4=User
5=Time 6=Keys



7=EvProg
8=Remote

4. Select 7 from user options.

1=Late Work
2=Schedule.....

5. The 'Event Programmer Main Menu' will be displayed. Select an option from the menu.

Note: The actual options will depend on how the system has been programmed by the installation engineer.

Changing Late Working Days

The late work option will only be available if there is a programmed Set 2 time for the day. If you log on during the set 1 warning period, and a set 2 time has been programmed, then the late working option will be displayed in place of the normal log on menu.

Late working can also be selected out with the set 1 warning period by proceeding as follows:

1=Late Work
2=Schedule.....

1

1. Select 1 from the 'Event Programmer Main Menu'.

1=Area1
2=Area2

2. The display may provide a choice of areas. Choose the required area. If successful the late working LED will come on.

Extending the Set Time (Commercial Only)

The set time can be extend by up to the end of the programmed schedule day. This is normally midnight but may be programmed by the engineer to allow operation though midnight.

It is only possible to extend the set time by logging on during the set warning period. The Ext Time option will appear on the event programmer menu.

0=Ext Time
1=Late Work ...

1. Select 0 from the 'Event Programmer Main Menu'.

Ext Time
(in mins)-__

Enter the number of minutes in the range 1-255. This operation can be repeated so long as the extended time is before the end of the programmed schedule day.

Viewing/Changing Scheduled Times

You can only change the times if this option has been programmed by the installation engineer. To view or change the scheduled times proceed as follows:

1=Late Work
2=Schedule

2

1. Select 2 from the 'Event Programmer' menu

Schedule
Number_

1'

2. The display will prompt for the schedule number. There are 4 possible schedules. For example enter 1 for schedule 1.

0=Copy 1=Mon
2=Tue 3=Wed

3. The display will show the days of the week.

Note: the copy option will only appear if the you are allowed to change the schedule times.

4. Select the number corresponding to the day to be viewed, or press ▼ to display the remaining days and select a number.

5=Fri 6=Sat
7=Sun

5. Choose Sunday for example.

1=Shunt On
2=Open 1.....

2

6. The display will then show the time options. The options available will depend on the type of software fitted to the panel (commercial of high security).

7. Select the time to be viewed as shown on the menu. For example choose Open 1, i.e. option 2.

Sun Open1
07:00

Quit

Press the ▼ or ▲ button to view the remaining times for that day within this schedule or press 'Quit' to return to the 'Schedule Menu'.

Sun Open1
Enter HH:MM

To change a time press ↵ (this option must be programmed by the installation engineer).

Enter the new schedule time.

Viewing Scheduled Holiday Periods

To view or add holidays to the holiday schedule, proceed as follows:

3=Holiday

3

1. Select 3 from the 'Event Programmer' menu. Press the ▼ button if Holiday is not visible.

Fri 24 Dec to
Sat 25 Dec

▼

2. The first scheduled holiday period will be displayed. Press the ▼ button to scan down the list of scheduled holiday periods.

↵ = Add Holiday

↵

3. The message ↵=Add Holiday will appear on the display after the last holiday period is viewed or if no holidays are programmed. Press the 'Quit' button to return to the 'Event Programmer' menu, or press 'Enter' to add a holiday period to the schedule.

Start Date
Enter DD:MM

4. The display will prompt for a start date to be entered. Enter a four-digit number representing the day and month of the holiday start date (DD:MM).

End Date
Enter DD:MM

5. The display will prompt for an end date to be entered. Enter a four-digit number representing the day and month of the holiday end (DD:MM).

Fri 25 Dec to
Sat 26 Dec

Quit

6. The display will show the holiday period.

7=EvProg
8=Remote

7. Press 'Quit' to return to the 'Event Programmer Menu'. Press 'Quit' to return to the 'User Options Menu'

Remote Operation

7=EvProg
8=Remote

The Windsor system can be controlled from a local or remote personal computer. To 'log on' to the system from a computer the Engineering communicator must be programmed by the installation engineer for the required remote functions. All Keypads will display 'Out of Service' until the 'Remote User' logs off. Select 'Remote' to allow the off-site engineer access to the panel.

Out of Service

This operation will only be required if Windsor has been configured for manual remote access.

Manager Isolate

A user with 'Manager' authority can isolate all circuits or concentrators. This option is only available if enabled by the engineer. All isolate operations are recorded in the system event log. To isolate a circuit, concentrator or all, proceed as follows :

2=Set 4=Test
5=Eng 6=Text.....



1=Chime 2=KPOff
3=Event Log



8=Remote
9=Isolate



1=Circuit
2=Concentrator

1. Log on using a 'Manager' Pin Code.
2. Press ↓ to move to page 2 of the User Options.
3. Press ▼ twice to view the page 2 User Options.
4. Select 9 from the User options

Important Note :

Care must be taken when bypassing or isolating circuits.

Bypass when bypassed the circuit is only ignored for the next set period.

Isolate when isolated the circuit or concentrator is ignored until the isolate is removed by either the customer or engineer.

Isolate Circuit

The isolate circuit operation enables a circuit to be isolated in case of a fault.

1=Circuit
2=Concentrator



Circuit Number

1. Select 1 from the 'Isolate' menu.
2. Enter the circuit number which requires isolation.

Circuit XXX
Isolated



3. Press 'Quit' to return to the 'Isolate' menu.

Note : The circuit isolate will only be removed if the fault condition has cleared. To re-enable repeat the above procedure.

Isolate Concentrator

The isolate concentrator operation enables a concentrator to be isolated in case of a fault.

1=Circuit
2=Concentrator

2

Concentrator
Number

Isol Conc X
Off

Quit

1=Circuit
2=Concentrator

1. Select 2 from the 'Isolate' menu.
2. Enter the concentrator number which requires isolation
3. Press 1 to isolate or 0 to remove isolation.
4. Press 'Quit' to return to the 'Isolate' menu.

Note : The circuit isolate will only be removed if the fault condition has cleared. To re-enable repeat the above procedure.

User Log Off

7=EvProg
8=Remote

Quit

↵ = Confirm Log
Off

↵

Company Name
Enter-

Quit

2=Set 4=Test
5=Eng 6=Text

1. The user can log off the system at any time by pressing the 'Quit' button from a main menu only.

2. The display will show 'Confirm Log Off'.

3. If the user wishes to log off, press 'Enter' which will display Company Name.

4. If not, press 'Quit' to return to the 'User Options Menu'

System Details

General

Number of Areas	
Number of Keypads	
Number of Keypoints	

Area Descriptions

System	
Area 1	
Area 2	
Area 3	
Area 4	
Area 5	
Area 6	
Area 7	

Bypass Group Descriptions

Group 1	
Group 3	
Group 4	
Group 5	
Group 6	
Group 7	

Circuit Descriptions

Cct 1	
Cct 2	
Cct 3	
Cct 4	
Cct 5	
Cct 6	
Cct 7	
Cct 8	
Cct 9	
Cct 10	
Cct 11	
Cct 12	
Cct 13	
Cct 14	
Cct 15	
Cct 16	
Cct 17	
Cct 18	
Cct 19	
Cct 20	
Cct 21	
Cct 22	
Cct 23	
Cct 24	
Cct 25	
Cct 26	
Cct 27	
Cct 28	

Cct 29	
Cct 30	
Cct 31	
Cct 32	
Cct 33	
Cct 34	
Cct 35	
Cct 36	
Cct 37	
Cct 38	
Cct 39	
Cct 40	
Cct 41	
Cct 42	
Cct 43	
Cct 44	
Cct 45	
Cct 46	
Cct 47	
Cct 48	
Cct 49	
Cct 50	
Cct 51	
Cct 52	
Cct 53	
Cct 54	
Cct 55	
Cct 56	
Cct 57	

Cct 58	
Cct 59	
Cct 60	
Cct 61	
Cct 62	
Cct 63	
Cct 64	
Cct 65	
Cct 66	
Cct 67	
Cct 68	
Cct 69	
Cct 70	
Cct 71	
Cct 72	
Cct 73	
Cct 74	
Cct 75	
Cct 76	
Cct 77	
Cct 78	
Cct 79	
Cct 80	
Cct 81	
Cct 82	
Cct 83	
Cct 84	
Cct 85	
Cct 86	

Cct 87	
Cct 88	
Cct 89	
Cct 90	
Cct 91	
Cct 92	
Cct 93	
Cct 94	
Cct 95	
Cct 96	
Cct 97	
Cct 98	
Cct 99	
Cct 100	
Cct 101	
Cct 102	
Cct 103	
Cct 104	
Cct 105	
Cct 106	
Cct 107	
Cct 108	
Cct 109	
Cct 110	
Cct 111	
Cct 112	
Cct 113	
Cct 114	
Cct 115	

Cct 116	
Cct 117	
Cct 118	
Cct 119	
Cct 120	
Cct 121	
Cct 122	
Cct 123	
Cct 124	
Cct 125	
Cct 126	
Cct 127	
Cct 128	

User Authorities & Descriptors

User 0	
User 1	
User 2	
User 3	
User 4	
User 5	
User 6	
User 7	
User 8	
User 9	
User 10	
User 11	
User 12	
User 13	
User 14	
User 15	
User 16	
User 17	
User 18	
User 19	
User 20	
User 21	
User 22	
User 23	
User 24	
User 25	
User 26	

User 27	
User 28	
User 29	
User 30	
User 31	
User 32	
User 33	
User 34	
User 35	
User 36	
User 37	
User 38	
User 39	
User 40	
User 41	
User 42	
User 43	
User 44	
User 45	
User 46	
User 47	
User 48	
User 49	
User 50	

Event Log and Area Log Messages


Event log and Area log messages			
Log Text	Additional Data	Display Text	Event Description
Alarm	Circuit <i>nnn</i>	Cct <i>nnn</i>	A Circuit alarm
Auto Check Fail	Circuit <i>nnn</i>	Cct <i>nnn</i>	A Circuit has failed to activate during the auto check period.
AV60 Tamper	NONE	NONE	Tamper on an AV60 input channel.
Battery Low	NONE	NONE	The battery has reached the low volts threshold (after a mains fail)
Conc. Tamper	<i>n</i>	<i>n</i>	Concentrator Tamper
Entry Alarm	Area <i>n</i>	<i>An</i>	The area is not unset before the end of the entry warning period
EVP Shunt Fault (HS only)	Circuit <i>nnn</i>	Cct <i>nnn</i>	The circuit is in alarm when the event programmer removes the shunt
Fire	Circuit <i>nnn</i>	Cct <i>nnn</i>	A fire type circuit alarm
Panel Tamper	NONE	NONE	Panel case or off the wall tamper
Personal Attack	Circuit <i>nnn</i>	Cct <i>nnn</i>	A PA type circuit alarm
Rmt. Auth Fail	NONE	NONE	Repeated attempt to log on by a remote host
Sounder Tamper	NONE	NONE	External sounder tamper
Tamper	Circuit <i>nnn</i>	Cct <i>nnn</i>	A circuit tamper
Tamper	Keypad <i>n</i>	KP <i>n</i>	A keypad tamper
Event log only messages			
230v Failed	NONE	NONE	Mains supply failed
230v Restored	NONE	NONE	Mains supply restored
Active Cct.Test	Circuit <i>nnn</i>	Cct <i>nnn</i>	User selected active circuit test
Alarm (master shunt)	Circuit <i>nnn</i>	Cct <i>nnn</i>	Master shunt type circuit alarms
Alarm Abort	User <i>nn</i> , Keypad <i>n</i>	Us <i>nn</i> , KP <i>n</i>	Alarm abort signal transmitted.
All Ccts Tested	User <i>nn</i> , <i>n</i>	Us <i>nn</i> , KP <i>n</i>	All circuit(s) tested, where n=1 for PA; n=2 for Walk, n=3 for 24hr and n=4 for detector.
Audio Untested	User <i>nn</i> , Area <i>n</i>	Us <i>nn</i> , <i>An</i>	User exits test without testing the audio output
Auto Set	User <i>nn</i> , Area <i>n</i>	Us <i>nn</i> , <i>An</i>	Event programmer automatically set area
Auto Set & Fault	User <i>nn</i> , Area <i>n</i>	Us <i>nn</i> , <i>An</i>	Event programmer automatically set area with circuit(s) in alarm
Auto Unset	User <i>nn</i> , Area <i>n</i>	Us <i>nn</i> , <i>An</i>	Event programmer automatically unset area
AV60 Mute	NONE	NONE	CS connection to AV60 has requested a sounders mute.

Event log and Area log messages			
Log Text	Additional Data	Display Text	Event Description
Aux	Circuit <i>nnn</i>	Cct <i>nnn</i>	Auxiliary type circuit alarms
Bat. Monitor Fail	NONE	NONE	Battery voltage is low or not present during a battery test
Beam Active	Circuit <i>nnn</i>	Cct <i>nnn</i>	Circuit programmed as one of a beam pair is in alarm
Bypass	User <i>nn</i> , Circuit <i>nnn</i>	Us <i>nn</i> Cct <i>nnn</i>	Circuit bypassed
Changed Holiday	User <i>nn</i> , Keypad <i>n</i>	Us <i>nn</i> , KP <i>n</i>	Event programmer holiday date changed
Changed PIN Code	User <i>nn</i> , Keypad <i>n</i>	Us <i>nn</i> , KP <i>n</i>	User changes own PIN
Changed PIN for	User <i>nn</i> , User <i>nn</i>	Us <i>nn</i> , Us <i>nn</i>	Manager or GCM user changes PIN for another user
Changed Schedule	User <i>nn</i> , <i>day</i>	Us <i>nn</i> , <i>day</i>	Event programmer re-programmed
Changed Time	User <i>nn</i> , Keypad <i>n</i>	Us <i>nn</i> , KP <i>n</i>	Time modified, old time and new time are logged
Clear (master shunt)	Circuit <i>nnn</i>	Cct <i>nnn</i>	Master shunt type circuit clears
Comm Acknowledge	<i>n</i>	<i>n</i>	Central station acknowledges alarm report
Comm Fail	<i>n</i>	<i>n</i>	Central station fails to acknowledge alarm report
Comm Test	User <i>nn</i> , Keypad <i>n</i>	Us <i>nn</i> , KP <i>n</i>	User or Windsor tested the communicator(s)
Comm Untested	User <i>nn</i> , <i>n</i>	Us <i>nn</i> , <i>n</i>	User exits test without testing the communicator
Det Test Fail	User <i>nn</i> , Keypad <i>n</i>	Us <i>nn</i> , KP <i>n</i>	Circuit(s) programmed as detector failed to alarm during a manual or automatic detector test
Dorm Confirmed	Circuit <i>nnn</i>	Cct <i>nnn</i>	Second dormitory circuit alarms
Dorm Initiated	Circuit <i>nnn</i>	Cct <i>nnn</i>	First dormitory circuit alarms
Duress Alarm	User <i>nn</i> , Keypad <i>n</i>	Us <i>nn</i> , KP <i>n</i>	User enters a duress code
EAC Log On	Circuit <i>nnn</i>	Cct <i>nnn</i>	EAC Log on circuit type alarms
Engineer Reset	Circuit <i>nnn</i>	Cct <i>nnn</i>	Engineer reset type circuit alarms
Entry Started	Circuit <i>nnn</i>	Cct <i>nnn</i>	Entry circuit opens
Failed Auto Set	User <i>nn</i> , Area <i>n</i>	Us <i>nn</i> , A <i>n</i>	Event programmer failed to auto set due to circuits in alarm
First PIN	User <i>nn</i> , Keypad <i>n</i>	Us <i>nn</i> , KP <i>n</i>	User entered PIN on Dual PIN keypad
GCM Access	User <i>00</i>	Us <i>nn</i>	A GCM user has logged on remotely.


Event log and Area log messages			
Log Text	Additional Data	Display Text	Event Description
Isolate	User <i>nn</i> , Circuit <i>nnn</i>	Usnn Cctnnn	Circuit isolated by user
Isolate (conc)	User <i>nn</i> , <i>n</i>	Usnn, <i>n</i>	Concentrator isolated by user
Key Set Req.	Circuit <i>nnn</i>	Cctnnn	Key type circuit alarms
Key Unset Req.	Circuit <i>nnn</i>	Cctnnn	Key type circuit clears
Late Working Off	User <i>nn</i> , <i>day</i>	Usnn, <i>day</i>	Late working is turned off for the day
Late Working On	User <i>nn</i> , <i>day</i>	Usnn, <i>day</i>	Late working is turned on for the day
Line Block	NONE	NONE	SmartDial has reported a line blocked condition
Line Fault	1 - 50 volts not present 2 - Line block test failure 3 - No acknowledge from central station	NONE	Communicator has reported a line fault
Lockout	Keypad <i>n</i>	KP <i>n</i>	Incorrect PIN attempt limit reached on the keypad
Logged Off	User <i>nn</i> , Keypad <i>n</i>	Usnn, KP <i>n</i>	User logged off keypad
Logged On	User <i>nn</i> , Keypad <i>n</i>	Usnn, KP <i>n</i>	User logged on keypad
Multiple Alarm	Circuit <i>nnn</i>	Cctnnn	Circuit has alarmed up to the multiple alarm limit
Normal (conc)	User <i>nn</i> , <i>n</i>	Usnn, <i>n</i>	Isolate removed from a concentrator
Normal (removed bypass)	User <i>nn</i> , Circuit <i>nnn</i>	Usnn Cctnnn	Bypass removed from a circuit
Normal (removed isolate)	User <i>nn</i> , Circuit <i>nnn</i>	Usnn Cctnnn	Isolate removed from a circuit
PIN Code Clash	User <i>nn</i> , User <i>nn</i>	Usnn, Usnn	User has chosen a new PIN code which is the same as another user
Power Fail	NONE	NONE	Supply voltage has fallen to the power fail threshold
Pre-Warning	Circuit <i>nnn</i>	Cctnnn	A circuit has been alarmed during the entry period
Reprogrammed	User <i>nn</i> , Keypad <i>n</i>	Usnn, KP <i>n</i>	A configuration option(s) has been changed
Reset	User <i>nn</i> , Area <i>n</i>	Usnn, Usnn	An areas has been reset
Reset Fire Alarm	User <i>nn</i> , Area <i>n</i>	Usnn, An	A fire type circuit has been reset
Restored PINs	User <i>nn</i> , Keypad <i>n</i>	Usnn, KP <i>n</i>	All PINs have been restored to default
Restore	Circuit <i>nnn</i>	Cctnnn	A Circuit alarm has restored.
Set	User <i>nn</i> , Area <i>n</i>	Usnn An	Area has been set by a user
Shunt Off	Circuit <i>nnn</i>	Cctnnn	A master shunt circuit or the event programmer schedule has removed the shunt from a circuit

Event log and Area log messages			
Log Text	Additional Data	Display Text	Event Description
Shunt On	Circuit <i>nnn</i>	Cct <i>nnn</i>	A master shunt circuit or the event programmer schedule has shunted a circuit
Soak Alarm	Circuit <i>nnn</i>	Cct <i>nnn</i>	A circuit on soak test has alarmed
Soak Failed	Circuit <i>nnn</i>	Cct <i>nnn</i>	At the end of the soak period any circuit which has alarmed is logged as fail
Soak Off	Circuit <i>nnn</i>	Cct <i>nnn</i>	A circuit has been taken off soak
Soak On	Circuit <i>nnn</i>	Cct <i>nnn</i>	A circuit has been put on soak
Sounder Untested	User <i>nn</i> , Area <i>n</i>	Us <i>nn</i> , A <i>n</i>	User exits test without testing the sounder output
Strobe Untested	User <i>nn</i> , Area <i>n</i>	Us <i>nn</i> , A <i>n</i>	User exits test without testing the strobe output
Man.Rst.	Keypad <i>n</i>	KP <i>n</i>	A managed reset code has been entered.
Temp Bypass	Circuit <i>nnn</i>	Cct <i>nnn</i>	A circuit has been temporarily (until clear) bypassed
UI Fire Alarm	Keypad <i>n</i>	KP <i>n</i>	The fire buttons on the keypad have been pressed
UI Medical Alarm	Keypad <i>n</i>	KP <i>n</i>	The medical buttons on the keypad have been pressed
UI PA Alarm	Keypad <i>n</i>	KP <i>n</i>	The PA buttons on the keypad have been pressed
Unset	User <i>nn</i> , Area <i>n</i>	Us <i>nn</i> A <i>n</i>	User has unset the area
Untested	User <i>nn</i> , Circuit <i>n</i>	Us <i>nn</i> , Cct <i>nnn</i>	User exits test without testing all circuits
Verify Alm	Area <i>n</i>	A <i>n</i>	A verified alarm has occurred

Windsor User Options - Page 1

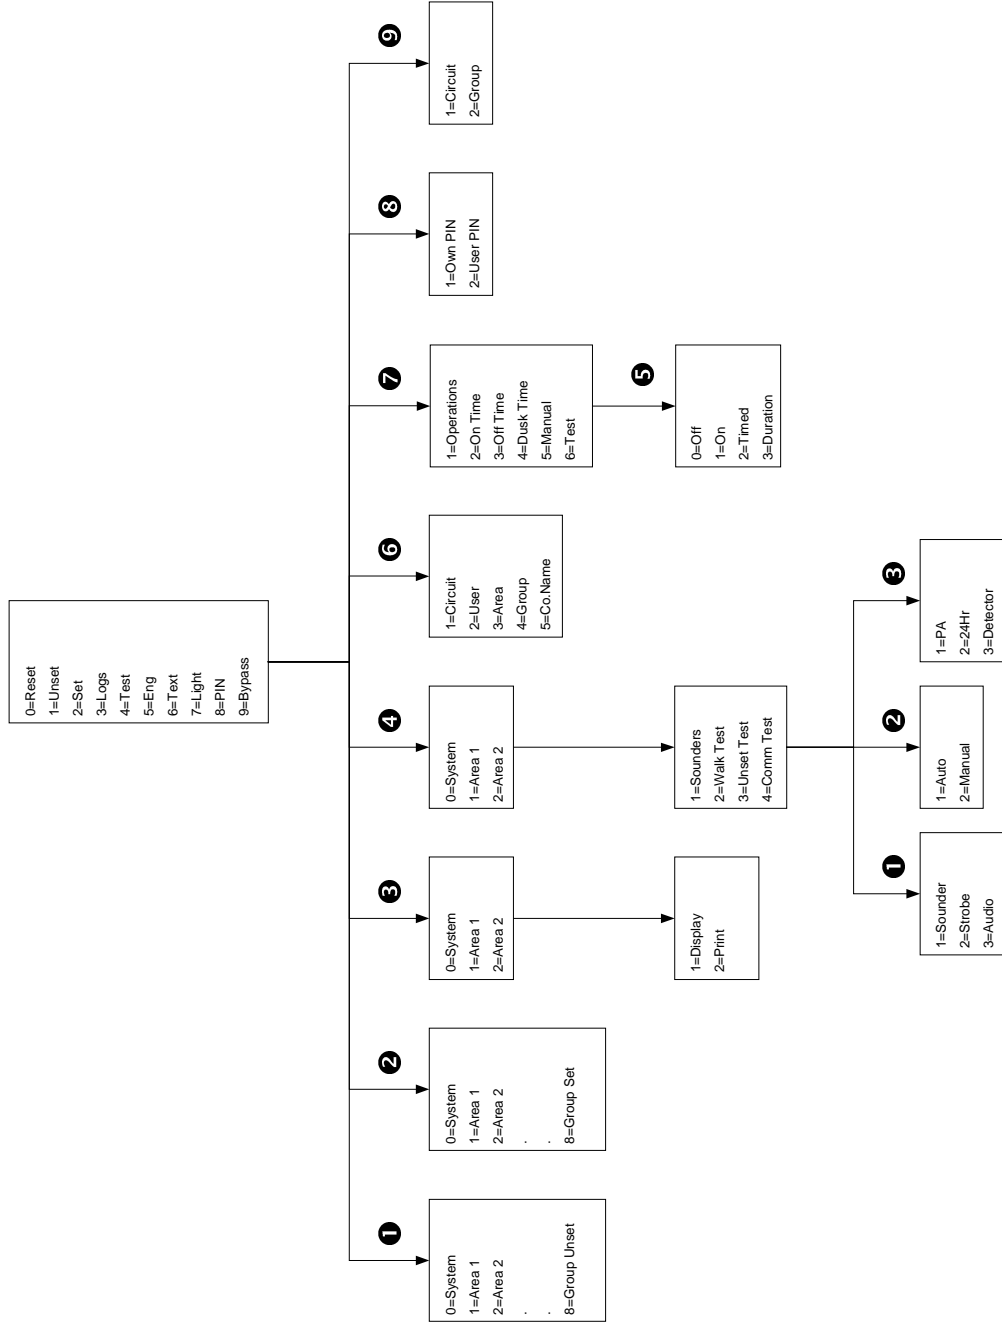

Windsor User Options - Page 2

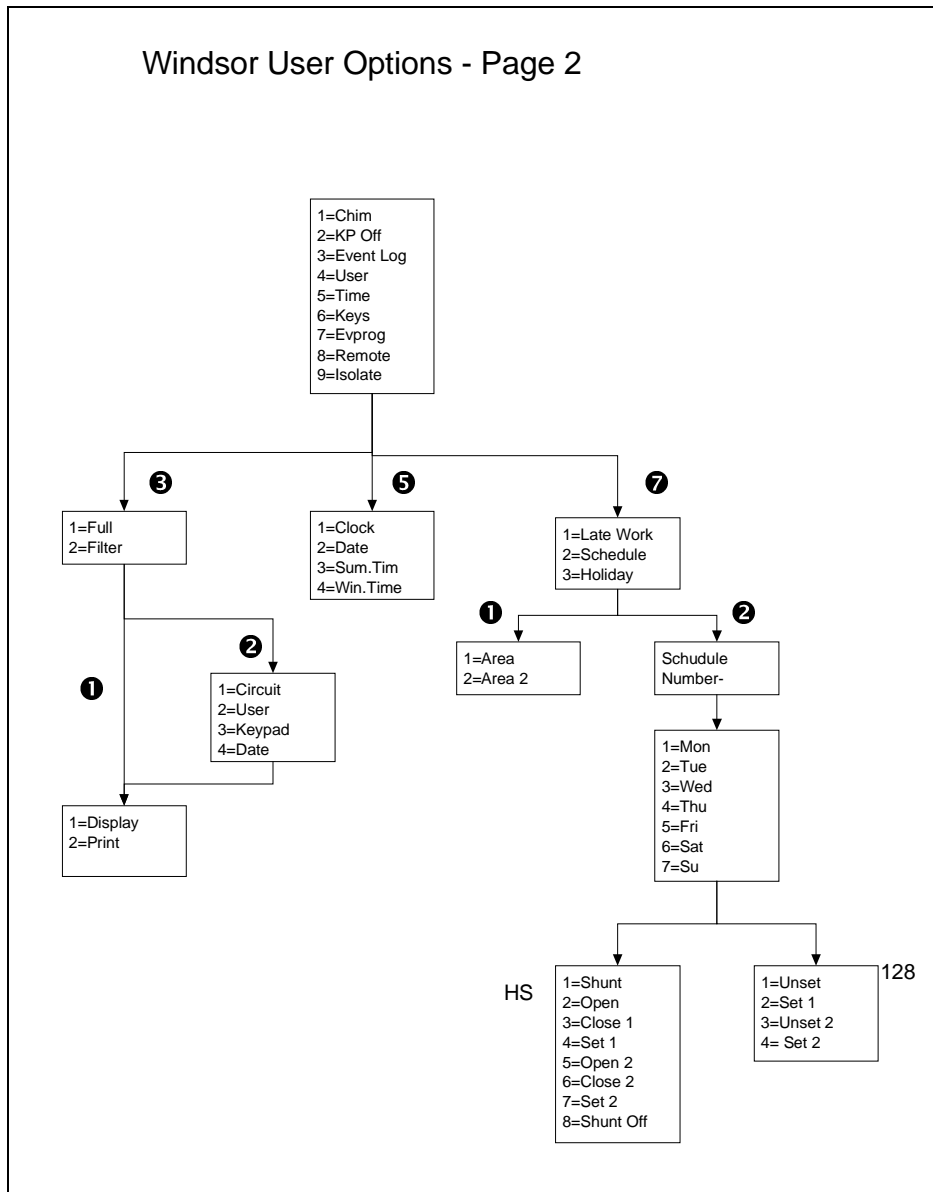

Guardall Limited
Lochend Industrial Estate
Newbridge
Edinburgh EH28 8PL

Tel: 0131-333-2900
FAX: 0131-333-4919

Technical Hotline: 0131-333-3802

Part Number: 320513-0C